



WAP-EN300C

NMS User Manual

Version 1.0, June 2016



FCC Compliance

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

To comply with the FCC RF exposure compliance requirements, this device and its antenna must not be co-located or operating to conjunction with any other antenna or transmitter.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Copyright

Copyright© 2015 Comtrend Corporation. All rights reserved. The information contained herein is proprietary to Comtrend Corporation. No part of this document may be translated, transcribed, reproduced, in any form, or by any means without the prior written consent of Comtrend Corporation.

This program is free software: you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation, either version 3 of the License, or(at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program. If not, see <http://www.gnu.org/licenses/>

NOTE: This document is subject to change without notice.

Protect Our Environment



This symbol indicates that when the equipment has reached the end of its useful life, it must be taken to a recycling center and processed separate from domestic waste.

The cardboard box, the plastic contained in the packaging, and the parts that make up this router can be recycled in accordance with regionally established regulations. Never dispose of this electronic equipment along with your household waste; you may be subject to penalties or sanctions under the law. Instead, please be responsible and ask for disposal instructions from your local

I. Product Information

The Network Management Suite (NMS) supports the central management of a group of access points, otherwise known as an AP Array. NMS can be installed on one access point and support up to 5 access points with no additional wireless controller required, reducing costs and facilitating efficient remote access point management.

Access points can be deployed and configured according to requirements, creating a powerful network architecture which can be easily managed and expanded in the future, with an easy to use interface and a full range of functionality – ideal for small and mid-sized office environments. A secure WLAN can be deployed and administered from a single point, minimizing cost and complexity.

II. Quick Setup


One AP (access point) is designated as the AP Controller (master) and other connected APs are designated as Managed APs (slaves). Using the NMS you can monitor, configure and manage all Managed APs (up to 5) from the single AP Controller.

Follow the steps below:


1. Connect all APs to an Ethernet or PoE switch which is connected to a gateway/router.



You can use your router as a DHCP server or you can later configure your AP Controller as a DHCP server.

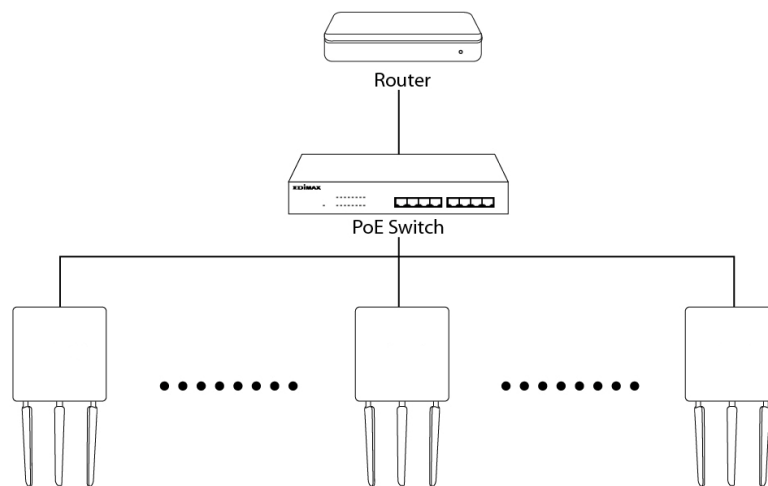

2. Ensure all APs are powered on and check the LED status.

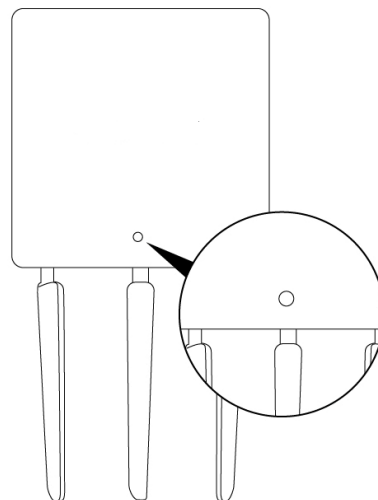

3. Designate one AP as the AP Controller which will manage all other connected APs (up to 5).
4. Connect a computer to the AP Controller using an Ethernet cable. Connect the AP Controller to power and power on the unit.
5. Open a web browser and enter the AP Controller's IP address in the address field. The default IP address is **192.168.2.2**.




DHCP is enabled on the access point by default. If no DHCP Service is found, the access point will default to IP address 192.168.2.2.




Your computer's IP address must be in the same subnet as the AP Controller. 192.168.2.10 is being used in this example.




6. Enter the username & password to login. The default username & password are **admin** & **1234** respectively.
7. You will arrive at the Access Point Information screen. Go to → **“Operation Mode”** and select **“AP Controller Mode”** from the drop down menu.

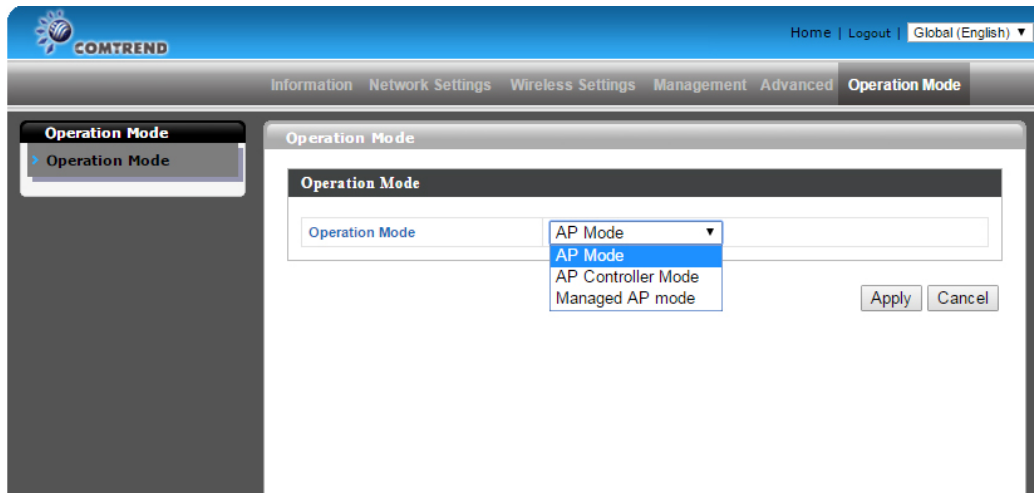

8. Click “Apply” to save the settings.

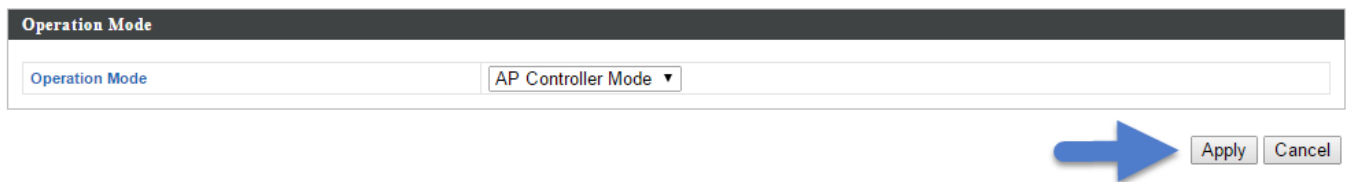

9. Your Controller AP & Managed APs should be fully functional. Use the top menu to navigate around the NMS.



Use **Local Network & Local Settings** to configure your Controller AP.

Use **Dashboard, Zone Plan, NMS Monitor & NMS Settings** to configure Managed APs.

Use **Toolbox** to diagnose connection issues.

III. Software Layout

The top menu features 7 panels: *Dashboard*, *Zone Plan*, *NMS Monitor*, *NMS Settings*, *Local Network*, *Local Settings* & *Toolbox*.


Dashboard

The screenshot displays the COMTREND NMS Dashboard. The top navigation bar includes links for Wizard, Home, Logout, Global, and English. The main menu bar lists: WAP-EH1750W, Dashboard, Zone Plan, NMS Monitor, NMS Settings, Local Network, Local Settings, and Toolbox. The dashboard is divided into four main sections:

- System Information:** Displays details for the WAP-EH1750W, including Host Name (APController), MAC Address (D8 B6 B7 97 DE A0), IP Address (192.168.0.4), Firmware Version (1.0.0), NMS Version (1.0.2.0), System Time (2015/11/16 16:01:27), and Uptime (0 day 00:03:32).
- Managed AP:** A table listing managed APs with columns: Index, MAC Address, Device Name, Model, IP Address, 2.4G Channel, 5G Channel, Clients, Status, and Action. Two APs are listed: AP Node #1 (192.168.0.2) and AP Node #2 (192.168.0.6).
- Managed AP Group:** A table listing managed AP groups with columns: Group Name, MAC Address, Device Name, Model, IP Address, Clients, Status, and Action. Two groups are listed: System Default (0) and Wizard AP Group 02 (2).
- Active Clients:** A table listing active clients with columns: Index, Client MAC Address, AP MAC Address, WLAN, Radio, Signal(%), Connected Time, Idle Time, Tx(KB), Rx(KB), and Vendor. Four clients are listed, all connected to the 192.168.0.4 AP.

The **Dashboard** panel displays an overview of your network and key system information, with quick links to access configuration options for Managed APs and Managed AP groups. Each panel can be refreshed, collapsed or moved according to your preference.

Zone Plan

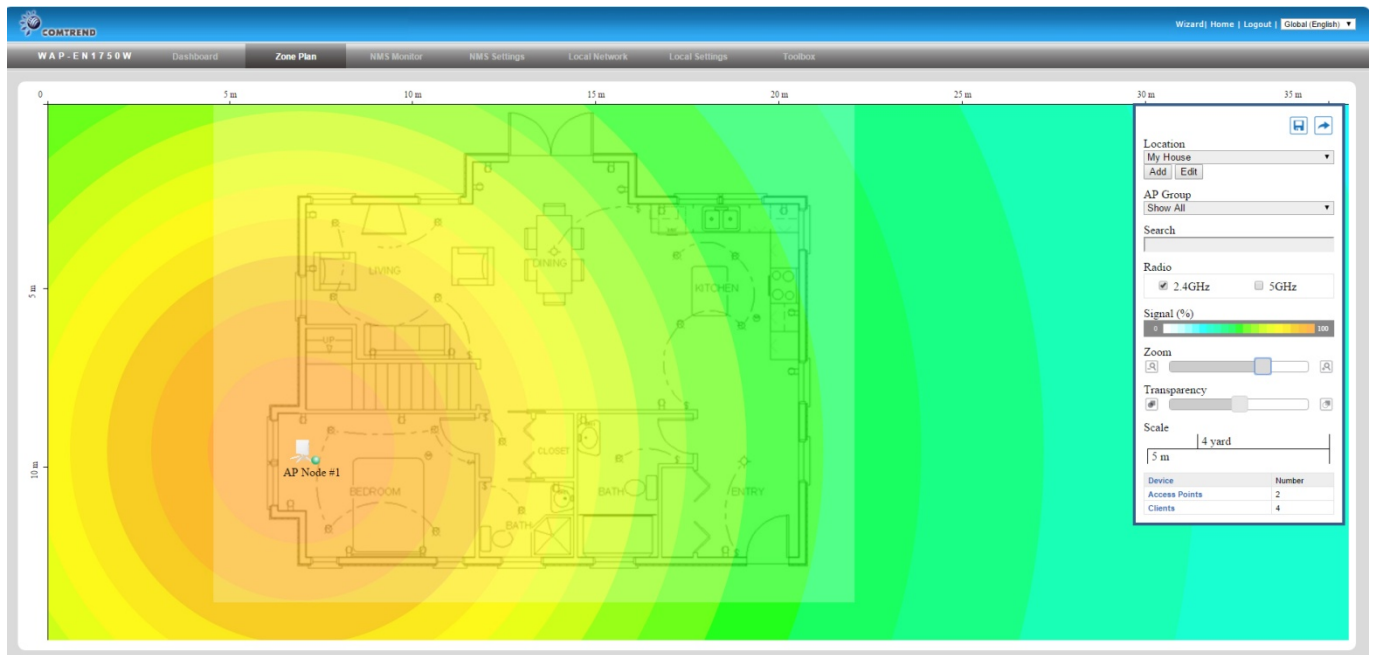

Zone Plan displays a customizable live map of Managed APs for a visual representation of your network coverage. Each AP icon can be moved around the map, and a background image can be uploaded for user-defined location profiles using **NMS Settings → Zone Edit**. Options can be configured using the menu on the right side and signal strength is displayed for each AP.

NMS Monitor

The NMS Monitor interface provides detailed monitoring information for Managed APs. It features a left-hand navigation menu with categories: Access Point (Managed AP), WLAN (Active WLAN, Active WLAN Group), Clients (Active Clients), Rogue Devices, and Information (All Events/Activities, Monitoring). The main panel displays a table of Managed APs with columns: Index, MAC Address, Device Name, Model, IP Address, 2.4G Channel, 5G Channel, Clients, Status, and Action.

Index	MAC Address	Device Name	Model	IP Address	2.4G Channel	5G Channel	Clients	Status	Action
1	00:1D:20:FF:C8:71	AP Node #1	WAP-EN1750W	192.168.0.2	8	36	4	●	[Icons]
2	00:1D:20:FF:C8:7B	AP Node #2		192.168.0.6	N/A	N/A	0	●	[Icons]

The **NMS Monitor** panel provides more detailed monitoring information about the AP Array than found on the Dashboard, grouped according to categories in the menu down the left side.

NMS Settings

The screenshot shows the 'NMS Settings' tab in the WAP-EN1750W web interface. The left sidebar contains a tree view with 'Access Point' expanded, showing options like WLAN, RADIUS, Access Control, Guest Network, Zone Edit, Device Monitoring, Firmware Upgrade, Advanced, System Security, and Date and Time. The main content area has three sections: 'Access Point', 'Access Point Group', and 'Access Point Settings'.

Access Point

MAC Address	Device Name	Model	AP Group	2.4G Channel	5G Channel	2.4G Tx Power	5G Tx Power	Status	Action
☐ 00:1D:20:FF:C8:71	AP Node #1	WAP-EN1750W	Wizard AP Group 02	8	36	Full	Full	●	✖
☐ 00:1D:20:FF:C8:7B	AP Node #2		Wizard AP Group 02	N/A	N/A	Full	Full	●	✖

Buttons: Refresh, Edit, Delete Selected, Delete All

Access Point Group

Group Name	AP Members	2.4G WLAN Profile	5G WLAN Profile	2.4G Guest Network Profile	5G Guest Network Profile	RADIUS Profile	Access Control Profile
☐ System Default	0	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled
☐ Wizard AP Group 02	2	Wizard WLAN 2.4G Group 1	Wizard WLAN 5.9G Group 2	Wizard Guest WLAN 2.4G Group 1	Wizard Guest WLAN 5.9G Group 2	Disabled	Disabled

Buttons: Add, Edit, Clone, Delete Selected, Delete All

Access Point Settings

Auto Approve: ☒ Enable ☐ Disable

Apply

NMS Settings provides extensive configuration options for the AP Array. You can manage each access point, assign access points into groups, manage WLAN, RADIUS as well as upgrade firmware across multiple access points. The Zone Plan can also be configured using “Zone Edit”.

Local Network

The screenshot shows the 'Local Network' tab in the WAP-EN1750W web interface. The left sidebar shows 'Network Settings' expanded, with 'LAN-side IP Address' selected. The main content area is titled 'LAN-side IP Address' and contains a form for configuring the IP address and DNS settings.


LAN-side IP Address

IP Address Assignment	Static IP Address ▼
IP Address	192.168.0.4
Subnet Mask	255.255.255.224
Default Gateway	192.168.0.1
Primary DNS Address	4.2.2.2
Secondary DNS Address	4.2.2.1

Apply


Local Network settings are for your AP Controller. You can configure the IP address and DHCP server of the AP Controller in addition to 2.4GHz & 5Ghz Wi-Fi and security, with WPS, RADIUS server, MAC filtering and WMM settings also available.

Local Settings

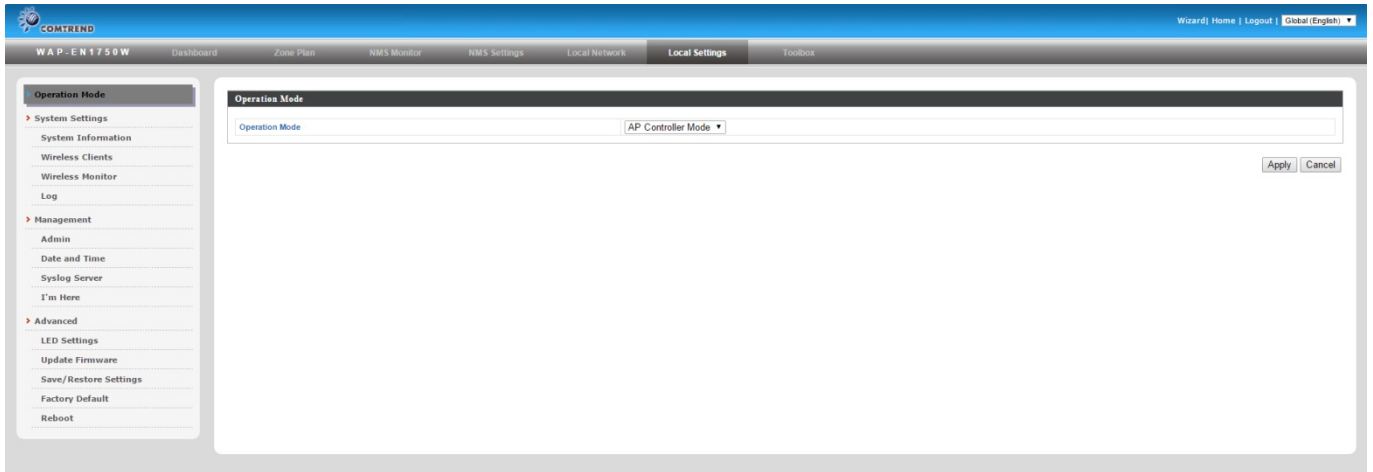

Local Settings are for your AP Controller. You can set the operation mode and view network settings (clients and logs) specifically for the AP Controller, as well as other management settings such as date/time, admin accounts, firmware and reset.


Toolbox

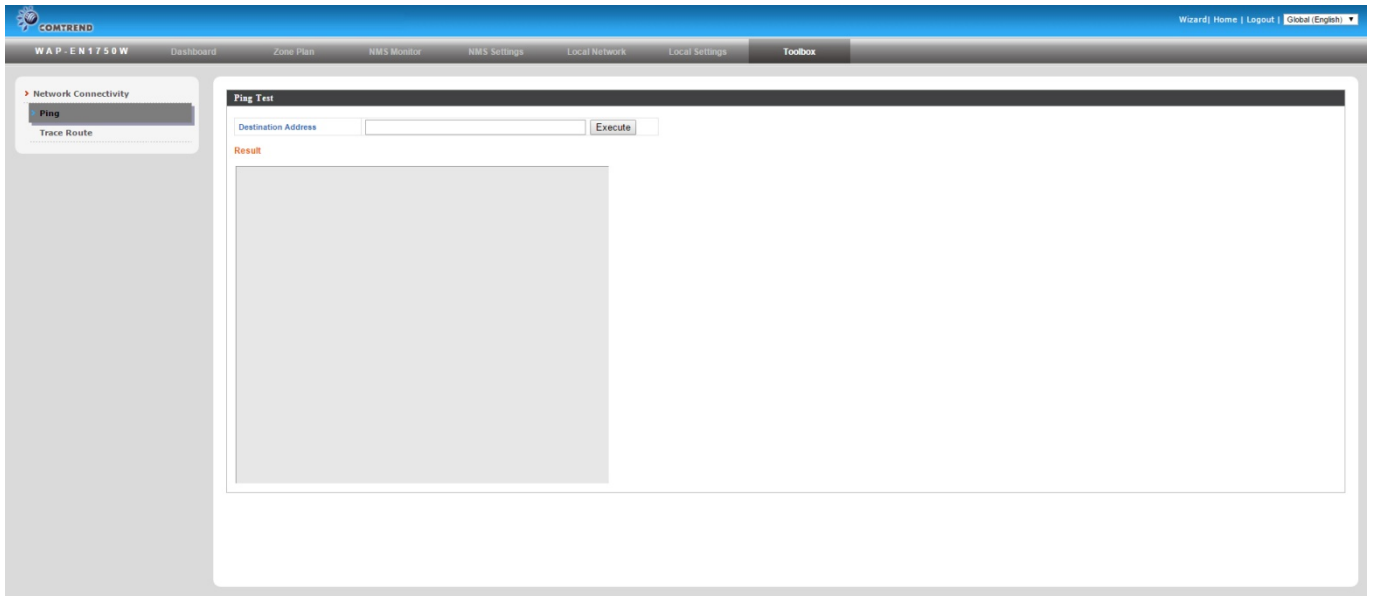

The Toolbox panel provides a network diagnostic tools: *ping* and *trace route*.

IV. Features

Descriptions of the functions of each main panel *Dashboard, Zone Plan, NMS Monitor, NMS Settings, Local Network, Local Settings & Toolbox* can be found below. When using the NMS, click “Apply” to save changes:



Screenshots displayed are examples. The information shown on your screen will vary depending on your configuration.


IV-1. LOGIN, LOGOUT & RESTART



It is recommended that you login to the AP Controller to make configurations to Managed APs.

LOGIN

1. Connect a computer to the designated AP Controller using an Ethernet cable:
2. Open a web browser and enter the AP Controller’s IP address in the address field. The default IP address is **192.168.2.2**



Your computer’s IP address must be in the same subnet as the AP Controller. Refer to V-1. Configuring your IP Address for more help.



DHCP is enabled on the access point by default. If no DHCP Service is found, the access point will default to IP address 192.168.2.2.



If using a DHCP server on the network, it is advised to use your DHCP server’s settings to assign the AP Controller a static IP address.

3. Enter the username & password to login. The default username & password are **admin** & **1234**.

RESTART

You can restart your AP Controller or any Managed AP using the NMS. To restart your AP Controller go to **Local Settings → Advanced → Reboot** and click “Reboot”.

To restart Managed APs click the Restart icon for the specified AP on the Dashboard:



IV-2. DASHBOARD

The dashboard displays an overview of your AP array:

System Information

Product Name	Generic-1750
Host Name	AP74DA38000B4
MAC Address	74:DA:38:00:00:B4
IP Address	192.168.2.2
Firmware Version	1.0.9
System Time	2012/01/01 00:19:40
Uptime	0 day 00:19:48

Devices Information

Device	Number
Access Points	2
Client Devices	0
Rogue Devices	0

Managed AP

Search☐ Match whole words

Index	MAC Address	Device Name	Model	IP Address	2.4G Channel	5G Channel	Clients	Status	Action
1	00:AA:BB:CC:DD:01	AP00AABBC	DD01	192.168.2.2	0	0	0		
2	00:AA:BB:CC:DD:02				0	0	0		

Managed AP Group

Search☐ Match whole words

Group Name	MAC Address	Device Name	Model	IP Address	Clients	Status	Action
System Default							
t (2)							
	00:AA:BB:CC:DD:01	AP00AABBC	DD01	192.168.2.2	0		
	00:AA:BB:CC:DD:02				0		

Active Clients

Search☐ Match whole words

Index	Client MAC Address	AP MAC Address	WLAN	Radio	Signal (%)	Connected Time	Idle Time	Tx(KB)	Rx(KB)	Vendor
Empty										



Use the blue icons above to refresh or collapse each panel in the dashboard. Click and drag to move a panel to suit your preference. You can set the dashboard to auto-refresh every 1 minute, 30 seconds or disable auto-refresh:

Auto Refresh Time :

1 minute

30 seconds

Disable

35

IV-2-1. System Information

System Information displays information about the AP Controller: *Product Name (model), Host Name, MAC Address, IP Address, Firmware Version, System Time and Uptime (time the access point has been on).*

System Information

Product Name	Generic-1750
Host Name	AP74DA380000B4
MAC Address	74:DA:38:00:00:B4
IP Address	192.168.2.2
Firmware Version	1.0.9
System Time	2012/01/01 00:20:09
Uptime	0 day 00:20:17

IV-2-2. Devices Information

Devices Information is a summary of the number of all devices in the local network: *Access Points, Clients Connected, and Rogue (unidentified) Devices.*

Devices Information

Device	Number
Access Points	2
Client Devices	0
Rogue Devices	0

IV-2-3. Managed AP

Managed AP displays information about each Managed AP in the local network: *Index (reference number), MAC Address, Device Name, Model, IP Address, 2.4GHz & 5GHz Wireless Channel Number, No. of Clients connected to each access point, and Status (connected, connecting or disconnected).*

Managed AP									
Search ☐ Match whole words									
Index	MAC Address	Device Name	Model	IP Address	2.4G Channel	5G Channel	Clients	Status	Action
1	00:AA:BB:CC:DD:01	AP00AAB BCCDD01		192.168.2.2	0	0	0		
2	00:AA:BB:CC:DD:02				0	0	0		

The **search** function can be used to locate a specific Managed AP. Type in the search box and the list will update:

Search ☐ Match whole words

The **Status** icon displays *grey* (disconnected), *yellow* (connecting) or *green* (connected) for each Managed AP.

Each Managed AP has “**Action**” icons with the following functions:



1. Disallow

Remove the Managed AP from the AP array and disable connectivity.

2. Edit

*Edit various settings for the Managed AP (refer to **IV-5-1. Access Point**).*

3. Blink LED

The Managed AP's LED will flash temporarily to help identify & locate access points.

4. Buzzer

The Managed AP's buzzer will sound temporarily to help identify & locate access points.

5. Network Connectivity

Go to the "Network Connectivity" panel to perform a ping or traceroute.

6. Restart

Restarts the Managed AP.

IV-2-4. Managed AP Group

Managed APs can be grouped according to your requirements. **Managed AP Group** displays information about each Managed AP group in the local network: *Group Name, MAC Address, Device Name, Model, IP Address, 2.4GHz & 5GHz Wireless Channel Number, No. of Clients connected to each access point, and Status (connected or disconnected).*

To edit Managed AP Groups go to **NMS Settings → Access Point** (refer to **IV-5-1. Access Point**).

Managed AP Group ↗ ↖							
Search		☐ Match whole words					
Group Name	MAC Address	Device Name	Model	IP Address	Clients	Status	Action
System Default (2)							✎
	00:AA:BB:C C:DD:01	AP00AABBC CDD01		192.168.2. 2	0		✖ ✎ B 🔊 💬 🔄
	00:AA:BB:C C:DD:02				0		✖ ✎ B 🔊 💬 🔄

The search function can be used to locate a specific Managed AP Group. Type in the search box and the list will update:

Search ☐ Match whole words

The **Status** icon displays *grey* (disconnected), *yellow* (connecting) or *green* (connected) for each individual Managed AP.

Each Managed AP has “**Action**” icons with the following functions:



1. Disallow

Remove the Managed AP from the AP array and disable connectivity.

2. Edit

*Edit various settings for the Managed AP (refer to **IV-5-1. Access Point**)*

3. Blink LED

The Managed AP's LED will flash temporarily to help identify & locate access points.

4. Buzzer

The Managed AP's buzzer will sound temporarily to help identify & locate access points.

5. Network Connectivity

Go to the “Network Connectivity” panel to perform a ping or traceroute.

6. Restart

Restarts the Managed AP.

IV-2-5. Active Clients

Active Clients displays information about each client in the local network: *Index (reference number), Client MAC Address, Device Name, Model, IP Address, 2.4GHz & 5GHz Wireless Channel Number, No. of Clients connected to each access point, and Status (on or off).*

Active Clients

Search

☐ Match whole words

Index	Client MAC Address	AP MAC Address	WLAN	Radio	Signal(%)	Connected Time	Idle Time	Tx(KB)	Rx(KB)	Vender
Empty										


The search function can be used to locate a specific client. Type in the search box and the list will update:

Search

☐ Match whole words



IV-3. ZONE PLAN

The Zone Plan can be fully customized to match your network environment. You can move the AP icons and select different location images (upload location images in **NMS Settings → Zone Edit**) to create a visual map of your AP array.

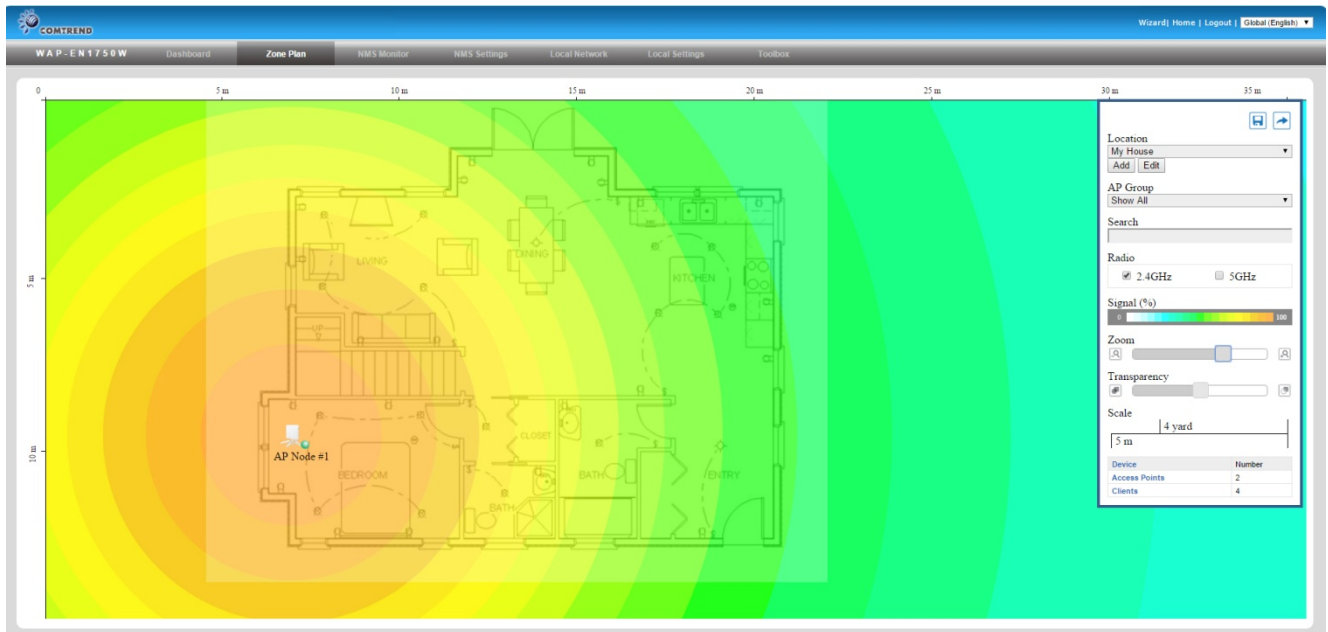

Use the menu on the right side to make adjustments and mouse-over an AP icon in the zone map to see more information. Click an AP icon in the zone map to select it and display action icons.

Click and drag an AP icon to move the icon around the zone map. The signal strength for each AP is displayed according to the “Signal” key in the menu on the right side:

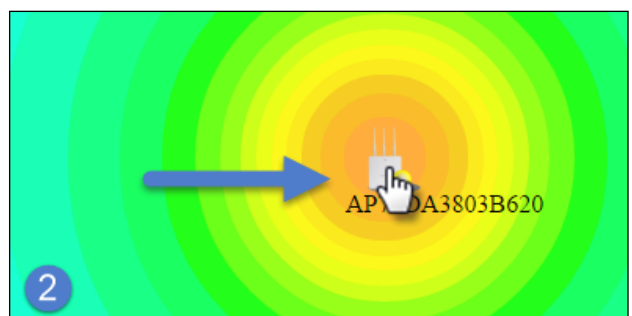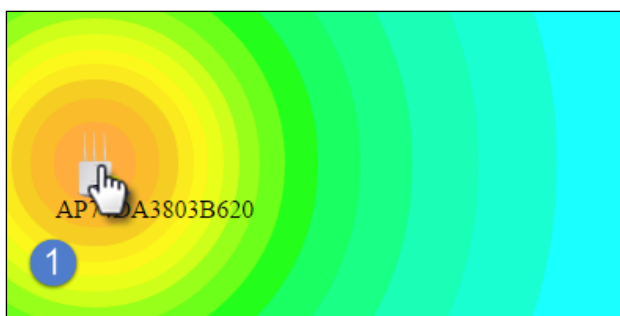

Location	Select a pre-defined location from the drop down menu. When you upload a location image in NMS Settings → Zone Edit , it will be available for selection here.
AP Group	You can select an AP Group to display in the

	zone map. Edit AP Groups in NMS Settings → Access Point .
Search	Use the search box to quickly locate an AP.
Radio	Use the checkboxes to display APs according to 2.4GHz or 5GHz wireless radio frequency.
Signal	Signal strength key for the signal strength display around each AP in the zone map.
Zoom	Use the slider to adjust the zoom level of the map.
Transparency	Use the slider to adjust the transparency of location images.
Scale	Zone map scale.
Device/Number	Displays number and type of devices in the zone map.

IV-4. NMS MONITOR

IV-4-1. Access Point

IV-4-1-1. Managed AP


Displays information about each Managed AP in the local network: *Index (reference number), MAC Address, Device Name, Model, IP Address, 2.4GHz & 5GHz Wireless Channel Number, No. of Clients connected to each access point, and Status (connected, connecting or disconnected).*

Managed AP									
Search				☐ Match whole words					
Index	MAC Address	Device Name	Model	IP Address	2.4G Channel	5G Channel	Clients	Status	Action
1	00:1D:20:FF:C8:71	AP Node #1	WAP-EN1750W	192.168.0.2	11	36	2		    
2	00:1D:20:FF:C8:7B	AP Node #2		192.168.0.6	N/A	N/A	0		    

The **search** function can be used to locate a specific Managed AP. Type in the search box and the list will update:

Search ☐ Match whole words

The **Status** icon displays the status of each Managed AP.

Status Icons			
Icon	Color	Status	Definition
	Grey	Disconnected	Managed AP is disconnected. <i>Please check the network connection and ensure the Managed AP is in the same IP subnet as the AP Controller.</i>
	Red	Authentication Failed Or Incompatible NMS Version	System security must be the same for all access points in the AP array. <i>Please check security settings (refer to IV-5-8-1. System Security).</i> Access points must use the same version of NMS: the managed AP will not be able to make configurations. <i>Please use the AP Controller's firmware upgrade function (refer to IV-5-7. Firmware Upgrade).</i>

	Orange	Configuring or Upgrading	<i>Please wait while the Managed AP makes configurations or while the firmware is upgrading.</i>
	Yellow	Connecting	<i>Please wait while Managed AP is connecting.</i>
	Green	Connected	<i>Managed AP is connected.</i>
	Blue	Waiting for Approval	<i>Managed AP is waiting for approval. Refer to IV-5-1. Access Point: Auto Approval. Note: Eight Managed APs are supported. Additional APs will display this status until an existing Managed AP is removed.</i>

Each Managed AP has “**Action**” icons with the following functions:



1. Disallow

Remove the Managed AP from the AP array and disable connectivity.

1. Edit

*Edit various settings for the Managed AP (refer to **IV-5-1. Access Point**).*

2. Blink LED

The Managed AP's LED will flash temporarily to help identify & locate access points.

3. Buzzer

The Managed AP's buzzer will sound temporarily to help identify & locate access points.

4. Network Connectivity

Go to the “Network Connectivity” panel to perform a ping or traceroute.

5. Restart

Restarts the Managed AP.

IV-4-1-2. Managed AP Group

Managed APs can be grouped according to your requirements. Managed AP Group displays information about each Managed AP group in the local network: *Group Name, MAC Address, Device Name, Model, IP Address, 2.4GHz & 5GHz Wireless Channel Number, No. of Clients connected to each access point, and Status (connected or disconnected).*

To edit Managed AP Groups go to **NMS Settings → Access Point** (refer to **IV-5-1. Access Point**).

Managed AP Group							
Search				☐ Match whole words			
Group Name	MAC Address	Device Name	Model	IP Address	Clients	Status	Action
System Default (0)							
Empty							
Wizard AP Group 02 (2)							
	00:1D:20:FF:C8:71	AP Node #1	WAP-EN1750W	192.168.0.2	2		
	00:1D:20:FF:C8:7B	AP Node #2		192.168.0.6	0		

The search function can be used to locate a specific Managed AP Group. Type in the search box and the list will update:

Search ☐ Match whole words

The **Status** icon displays *grey* (disconnected), *red* (authentication failed/incompatible NMS version), *orange* (upgrading firmware), *yellow* (connecting), *green* (connected) or *blue* (waiting for approval) for each individual Managed AP. Refer to **IV-4-1-1. Managed AP:Status Icons** for full descriptions.

Each Managed AP has “**Action**” icons with the following functions:



2. Disallow

Remove the Managed AP from the AP array and disable connectivity.

3. Edit

*Edit various settings for the Managed AP (refer to **IV-5-1. Access Point**).*

4. Blink LED

The Managed AP's LED will flash temporarily to help identify & locate access points.

5. Buzzer

The Managed AP's buzzer will sound temporarily to help identify & locate access points.

6. Network Connectivity

Go to the "Network Connectivity" panel to perform a ping or traceroute.

7. Restart

Restarts the Managed AP.

IV-4-2. WLAN

IV-4-2-1. Active WLAN

Displays information about each SSID in the AP Array: *Index (reference number), Name/SSID, VLAN ID, Authentication, Encryption, IP Address and Additional Authentication.*

To configure encryption and VLANs for Managed APs go to **NMS Settings → WLAN.**

The search function can be used to locate a specific SSID. Type in the search box and the list will update:

Search

☐ Match whole words

Active WLAN

Search

☐ Match whole words

Index	Name/ESSID	VLAN ID	Authentication	Encryption	Additional Authentication
1	matt2.4	1	WPA2PSK	WPAPSK	No additional authentication
2	matt5	1	WPA2PSK	WPAPSK	No additional authentication

IV-4-2-2. Active WLAN Group

WLAN groups can be created according to your preference. Active WLAN Group displays information about WLAN group: *Group Name, Name/SSID, VLAN ID, Authentication, Encryption, IP Address and Additional Authentication.*

The search function can be used to locate a specific Active WLAN Group. Type in the search box and the list will update:

Search ☐ Match whole words

Active WLAN Group					
Search		☐ Match whole words			
Group Name	Name/SSID	VLAN ID	Authentication	Encryption	Additional Authentication
Default (0)					
Empty					
WLAN Group 2 (1)					
	matt2.4	1	WPA2PSK	AES	No additional authentication
WLAN Group 3 (1)					
	matt5	1	WPA2PSK	AES	No additional authentication

IV-4-3. Clients

IV-4-3-1. Active Clients

Displays information about clients currently connected to the AP Array: *Index(reference number), Client MAC Address, AP MAC Address, WLAN (SSID), Radio (2.4GHz or 5GHz), Signal Strength received by Client, Connected Time, Idle Time, Tx & Rx (Data transmitted and received by Client in KB), and the Vendor of the client device.*

You can set or disable the auto-refresh time for the client list or click “Refresh” to manually refresh.

The search function can be used to locate a specific client. Type in the search box and the list will update:

Search ☐ Match whole words

Refresh time

Auto Refresh time

☒ 1 Minute
 ☐ 30 seconds
 ☐ Disable

Manual Refresh

Refresh

Active Clients

Search

☐ Match whole words

Index	Client MAC Address	AP MAC Address	WLAN	Radio	Signal(%)	Connected Time	Idle Time	Tx(KB)	Rx(KB)	Vender
1	6C:88:14:70:C2:14	74:DA:38:00:00:24	WIZARD_TEST5	5GHz	100	3 min 33 secs	4320	17.974	627.154	Intel Corporate
2	B4:52:7E:84:DB:5B	00:AA:BB:CC:DD:22	WIZARD_TEST1	2.4GHz	100	6 min 53 secs	120	8.554	46.607	Sony Mobile Communications AB

IV-4-4. Information

IV-4-4-1. All Events/Activities

Displays a log of time-stamped events for each access point in the Array – use the drop down menu to select an access point and view the log.

Select AP:

74:DA:38:03:B6:20

2012/01/01 00:03:57: Managed AP(74:DA:38:03:B6:20) was disconnected

2012/01/01 00:08:25: Managed AP(74:DA:38:03:B6:20) was disconnected

2012/01/01 00:12:49: Managed AP(74:DA:38:03:B6:20) was disconnected

2012/01/01 00:17:17: Managed AP(74:DA:38:03:B6:20) was disconnected

2012/01/01 00:21:44: Managed AP(74:DA:38:03:B6:20) was disconnected

2012/01/01 00:26:11: Managed AP(74:DA:38:03:B6:20) was disconnected

2012/01/01 00:30:36: Managed AP(74:DA:38:03:B6:20) was disconnected

2012/01/01 00:35:03: Managed AP(74:DA:38:03:B6:20) was disconnected

2012/01/01 00:39:27: Managed AP(74:DA:38:03:B6:20) was disconnected

2012/01/01 00:43:55: Managed AP(74:DA:38:03:B6:20) was disconnected

2012/01/01 00:48:22: Managed AP(74:DA:38:03:B6:20) was disconnected

IV-5. NMS Settings

IV-5-1. Access Point

Displays information about each access point and access point group in the local network and allows you to edit access points and edit or add access point groups.

The **search** function can be used to locate an access point or access point group. Type in the search box and the list will update:

Search

☐ Match whole words

☐	MAC Address	Device Name	Model	AP Group	2.4G Channel	5G Channel	2.4G Tx Power	5G Tx Power	Status	Action
☐	00:AA:BB:CC:DD:01	AP00AABBCCDD01		System Default	0	0	Full	Full		
☐	00:AA:BB:CC:DD:02			System Default	0	0	Full	Full		

Refresh

Edit

Delete Selected

Delete All

Search

☐ Match whole words

☐	Group Name	AP Members	2.4G WLAN Profile	5G WLAN Profile	2.4G Guest Network Profile	5G Guest Network Profile	RADIUS Profile	Access Control Profile
☐	System Default	2	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled

Add

Edit

Clone

Delete Selected

Delete All

Access Point Settings

Auto Approve

☒ Enable☐ Disable


Apply

The **Status** icon displays *grey* (disconnected), *red* (authentication failed/incompatible NMS version), *orange* (upgrading firmware), *yellow* (connecting), *green* (connected) or *blue* (waiting for approval) for each individual Managed AP. Refer to **IV-4-1-1. Managed AP:Status Icons** for full descriptions.

The **“Action”** icons enable you to allow or disallow an access point:



Select an access point or access point group using the check-boxes and click “**Edit**” to make configurations, or click “**Add**” to add a new access point group:

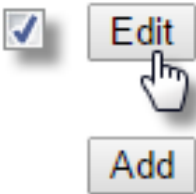

The **Access Point Settings** panel can enable or disable Auto Approve for all Managed APs. When enabled, Managed APs will automatically join the AP Array with the Controller AP. When disabled, Managed APs must be manually approved to join the AP Array with the Controller AP.

Access Point Settings

Auto Approve

☒ Enable ☐ Disable

Apply

Access Point Settings	
Auto Approve	Enable or disable Auto Approve for all Managed APs.


To manually approve a Managed AP, use the *allow* “Action” icon for the specified access point:

Edit Access Point


Configure your selected access point on your LAN. You can set the access point as a DHCP client or specify a static IP address for your access point, and assign the access point to an AP group, as well as edit 2.4GHz & 5GHz wireless radio settings. An events log is displayed at the bottom of the page.

You can also use **Profile Settings** to assign the access point to WLAN, RADIUS and Access Control groups independently from Access Point Group settings.

Check the “**Override Group Settings**” box to use different individual settings for access points assigned to AP Groups:



Basic Settings	
Name	AP74DA3803B530
Description	
MAC Address	74:DA:38:03:B5:30
AP Group	System Default ▼
IP Address Assignment ☐ Override Group Setting Static IP Address ▼	
IP Address	192.168.222.101
Subnet Mask	255.255.255.0
Default Gateway	User-Defined ▼ 192.168.222.2
Primary DNS	User-Defined ▼ 192.168.222.3
Secondary DNS	User-Defined ▼ 192.168.222.4



IP Address Assignment	☒ Override Group Setting DHCP Client ▼
IP Address	192.168.222.101
Subnet Mask	255.255.255.0
Default Gateway	From DHCP ▼ 192.168.222.2
Primary DNS	From DHCP ▼ 192.168.222.3
Secondary DNS	From DHCP ▼ 192.168.222.4

Basic Settings	
Name	Edit the access point name. The default name is AP + MAC address.
Description	Enter a description of the access point for reference e.g. 2 nd Floor Office.
MAC Address	Displays MAC address.
AP Group	Use the drop down menu to assign the AP to an AP Group. You can edit AP Groups from the NMS Settings → Access Point page.
IP Address Assignment	Select “DHCP Client” for your access point to be assigned a dynamic IP address from your router’s DHCP server, or select “Static IP” to manually specify a static/fixed IP address for your access point (below). Check the box “Override Group Setting” if the AP is a member of an AP Group and you wish to use a different setting than the AP Group setting.
IP Address	Specify the IP address here. This IP address will be assigned to your access point and will replace the default IP address.
Subnet Mask	Specify a subnet mask. The default value is 255.255.255.0

Default Gateway	For DHCP users, select “From DHCP” to get default gateway from your DHCP server or “User-Defined” to enter a gateway manually. For static IP users, the default value is blank.
Primary DNS	DHCP users can select “From DHCP” to get primary DNS server’s IP address from DHCP or “User-Defined” to manually enter a value. For static IP users, the default value is blank.
Secondary DNS	DHCP users can select “From DHCP” to get secondary DNS server’s IP address from DHCP or “User-Defined” to manually enter a value. For static IP users, the default value is blank.

Radio Settings			
	Radio B/G/N (2.4 GHz)		Radio A/N (5.0 GHz)
Wireless	☐ Override Group Setting	Enable ▾	☐ Override Group Setting Enable ▾
Band	☐ Override Group Setting	11b/g/n ▾	☐ Override Group Setting 11a/n/ac ▾
Auto Pilot	☐ Override Group Setting	Enable ▾	☐ Override Group Setting Enable ▾
Auto Pilot Range	☐ Override Group Setting	Ch 1 - 11 ▾	☐ Override Group Setting ▾
Auto Pilot Interval	☐ Override Group Setting	Half day ▾ ☐ Change channel even if clients are connected	☐ Override Group Setting Half day ▾ ☐ Change channel even if clients are connected
Channel Bandwidth	☐ Override Group Setting	Auto ▾	☐ Override Group Setting Auto 80/40/20 MHz ▾
BSS BasicRateSet	☐ Override Group Setting	all ▾	☐ Override Group Setting all ▾
⊖ Advanced Settings			
	Radio B/G/N (2.4 GHz)		Radio A/N (5.0 GHz)
Contention Slot	☐ Override Group Setting	Short ▾	☐ Override Group Setting Short ▾
Preamble Type	☐ Override Group Setting	Short ▾	☐ Override Group Setting Short ▾
Guard Interval	☐ Override Group Setting	Short GI ▾	☐ Override Group Setting Short GI ▾
802.11n Protection	☐ Override Group Setting	Enable ▾	☐ Override Group Setting Enable ▾
DTIM Period	☐ Override Group Setting	255 (1-255)	☐ Override Group Setting 255 (1-255)
RTS Threshold	☐ Override Group Setting	2347 (1-2347)	☐ Override Group Setting 2347 (1-2347)
Fragment Threshold	☐ Override Group Setting	2346 (256-2346)	☐ Override Group Setting 2346 (256-2346)
Multicast Rate	☐ Override Group Setting	Auto ▾	☐ Override Group Setting Auto ▾
Tx Power	☐ Override Group Setting	100% ▾	☐ Override Group Setting 100% ▾
Beacon Interval	☐ Override Group Setting	100 (40-1000 ms)	☐ Override Group Setting 100 (40-1000 ms)
Station idle timeout	☐ Override Group Setting	300 (30-65535 seconds)	☐ Override Group Setting 300 (30-65535 seconds)

Radio Settings	
Wireless	Enable or disable the access point’s 2.4GHz or 5GHz wireless radio. When disabled, no SSIDs on that frequency will be active.
Band	Select the wireless standard used for the access point. Combinations of 802.11b, 802.11g, 802.11n & 802.11ac can be selected.
Auto Pilot	Enable/disable auto channel selection. Auto

	channel selection will automatically set the wireless channel for the access point's 2.4GHz or 5GHz frequency based on availability and potential interference. When disabled, select a channel manually.
Auto Pilot Range	Select a range from which the auto channel setting (above) will choose a channel.
Auto Pilot Interval	Specify a frequency for how often the auto channel setting will check/reassign the wireless channel. Check/uncheck the "Change channel even if clients are connected" box according to your preference.
Channel Bandwidth	Set the channel bandwidth or use Auto (automatically select based on interference level).
BSS BasicRateSet	Set a Basic Service Set (BSS) rate: this is a series of rates to control communication frames for wireless clients.

These settings are for experienced users only. Please do not change any of the values on this page unless you are already familiar with these functions.



Changing these settings can adversely affect the performance of your access point.

Advanced Settings	
Contention Slot	Select "Short" or "Long" – this value is used for contention windows in WMM (see IV-6-7. WMM).
Preamble Type	Set the wireless radio preamble type. The preamble type in 802.11 based wireless communication defines the length of the CRC(Cyclic Redundancy Check)block for communication between the access point and roaming wireless adapters. The default value is "Short Preamble".
Guard Interval	Set the guard interval.A shorter interval can improve performance.

802.11g Protection	Enable/disable 802.11g protection, which increases reliability but reduces bandwidth (clients will send Request to Send (RTS) to access point, and access point will broadcast Clear to Send (CTS), before a packet is sent from client.)
802.11n Protection	Enable/disable 802.11n protection, which increases reliability but reduces bandwidth (clients will send Request to Send (RTS) to access point, and access point will broadcast Clear to Send (CTS), before a packet is sent from client.)
DTIM Period	Set the DTIM (delivery traffic indication message) period value of the wireless radio. The default value is 1.
RTS Threshold	Set the RTS threshold of the wireless radio. The default value is 2347.
Fragment Threshold	Set the fragment threshold of the wireless radio. The default value is 2346.
Multicast Rate	Set the transfer rate for multicast packets or use the "Auto" setting.
Tx Power	Set the power output of the wireless radio. You may not require 100% output power. Setting a lower power output can enhance security since potentially malicious/unknown users in distant areas will not be able to access your signal.
Beacon Interval	Set the beacon interval of the wireless radio. The default value is 100.
Station idle timeout	Set the interval for keepalive messages from the access point to a wireless client to verify if the station is still alive/active.

Profile Settings			
	Radio B/G/N (2.4 GHz)		Radio A/N (5.0 GHz)
WLAN Group	☐ Override Group Setting	WLAN Group 2 ▼	☐ Override Group Setting WLAN Group 3 ▼
Guest Network Group	☐ Override Group Setting	Disable ▼	☐ Override Group Setting Disable ▼
RADIUS Group	☐ Override Group Setting	▼	
Access Control Group	☐ Override Group Setting	Default ▼	

Profile Settings	
WLAN Group	Assign the access point's 2.4GHz or 5GHz SSID(s) to a WLAN Group. You can edit WLAN groups in NMS Settings → WLAN .
RADIUS Group	Assign the access point's 2.4GHz SSID(s) to a RADIUS group. You can edit RADIUS groups in NMS Settings → RADIUS .
Access Control Group	Assign the access point's 2.4GHz SSID(s) to a RADIUS group. You can edit RADIUS groups in NMS Settings → Access Control

Add/Edit Access Point Group

Configure your selected access point group. Access point group settings apply to all access points in the group, unless individually set to override group settings.

You can use **Profile Group Settings** to assign the access point group to WLAN, RADIUS and Access Control groups.

The **Group Settings** panel can be used to quickly move access points between exsiting groups: select an access point and use the drop down menu or search to select access point groups and use << and >> arrows to move APs between groups.

Basic Group Settings

Name	System Default
Description	System default group for APs

Basic Group Settings	
Name	Edit the access point group name.
Description	Enter a description of the access point group for reference e.g. 2 nd Floor Office Group.

Radio Group Settings

	Radio B/G/N (2.4 GHz)	Radio A/N (5.0 GHz)
Wireless	Enable ▾	Enable ▾
Band	11b/g/n ▾	11a/n/ac ▾
Auto Pilot	Enable ▾	Enable ▾
Auto Pilot Range	Ch 1 - 11 ▾	▾
Auto Pilot Interval	Half day ▾ ☐ Change channel even if clients are connected	Half day ▾ ☐ Change channel even if clients are connected
Channel Bandwidth	Auto ▾	Auto 80/40/20 MHz ▾
BSS BasicRateSet	all ▾	all ▾

⊖ Advanced Settings

	Radio B/G/N (2.4 GHz)	Radio A/N (5.0 GHz)
Contention Slot	Short ▾	Short ▾
Preamble Type	Short ▾	Short ▾
Guard Interval	Short GI ▾	Short GI ▾
802.11n Protection	Enable ▾	Enable ▾
DTIM Period	255 (1-255)	255 (1-255)
RTS Threshold	2347 (1-2347)	2347 (1-2347)
Fragment Threshold	2346 (256-2346)	2346 (256-2346)
Multicast Rate	Auto ▾	Auto ▾
Tx Power	100% ▾	100% ▾
Beacon Interval	100 (40-1000 ms)	100 (40-1000 ms)
Station idle timeout	300 (30-65535 seconds)	300 (30-65535 seconds)

Radio Group Settings	
Wireless	Enable or disable the access point group's 2.4GHz or 5GHz wireless radio. When disabled, no SSIDs on that frequency will be active.
Band	Select the wireless standard used for the access point group. Combinations of 802.11b, 802.11g, 802.11n & 802.11ac can be selected.
Auto Pilot	Enable/disable auto channel selection. Auto channel selection will automatically set the wireless channel for the access point group's 2.4GHz or 5GHz frequency based on availability and potential interference. When disabled, select a channel manually.
Auto Pilot Range	Select a range from which the auto channel setting (above) will choose a channel.
Auto Pilot Interval	Specify a frequency for how often the auto channel setting will check/reassign the wireless channel. Check/uncheck the "Change channel even if clients are connected" box according to your preference.
Channel Bandwidth	Set the channel bandwidth or use Auto (automatically select based on interference level).
BSS BasicRateSet	Set a Basic Service Set (BSS) rate: this is a series of rates to control communication frames for wireless clients.

These settings are for experienced users only. Please do not change any of the values on this page unless you are already familiar with these functions.



Changing these settings can adversely affect the performance of your access points.

Advanced Settings	
Contention Slot	Select "Short" or "Long" – this value is used for contention windows in WMM (see IV-6-7. WMM).

Preamble Type	Set the wireless radio preamble type. The preamble type in 802.11 based wireless communication defines the length of the CRC(Cyclic Redundancy Check)block for communication between the access point and roaming wireless adapters. The default value is "Short Preamble".
Guard Interval	Set the guard interval.A shorter interval can improve performance.
802.11g Protection	Enable/disable 802.11g protection, which increases reliability but reduces bandwidth (clients will send Request to Send (RTS) to access point, and access point will broadcast Clear to Send (CTS), before a packet is sent from client.)
802.11n Protection	Enable/disable 802.11n protection, which increases reliability but reduces bandwidth (clients will send Request to Send (RTS) to access point, and access point will broadcast Clear to Send (CTS), before a packet is sent from client.)
DTIM Period	Set the DTIM (delivery traffic indication message) period value of the wireless radio. The default value is 1.
RTS Threshold	Set the RTS threshold of the wireless radio. The default value is 2347.
Fragment Threshold	Set the fragment threshold of the wireless radio. The default value is 2346.
Multicast Rate	Set the transfer rate for multicast packets or use the "Auto" setting.
Tx Power	Set the power output of the wireless radio. You may not require 100% output power.Setting a lower power output can enhance security since potentially malicious/unknown users in distantareas will not be able to access your signal.
Beacon Interval	Set the beacon interval of the wireless radio. The default value is 100.
Station idle timeout	Set the interval for keepalive messages from the access point to a wireless client to verify if the station is still alive/active.

Profile Group Settings		
	Radio B/G/N (2.4 GHz)	Radio A/N (5.0 GHz)
WLAN Group	Default ▼	Default ▼
Guest Network Group	Disable ▼	Disable ▼
RADIUS Group	▼	
Access Control Group	Default ▼	

Group Settings										
Members	Search Group Name: System Default <table border="1"> <thead> <tr> <th>MAC Address</th> <th>Device Name</th> </tr> </thead> <tbody> <tr> <td colspan="2">No Access Point.</td> </tr> </tbody> </table>	MAC Address	Device Name	No Access Point.		Search AP Group 02 ▼ <table border="1"> <thead> <tr> <th>MAC Address</th> <th>Device Name</th> </tr> </thead> <tbody> <tr> <td>74:DA:38:03:B6:20</td> <td>AP74DA3803B620</td> </tr> </tbody> </table>	MAC Address	Device Name	74:DA:38:03:B6:20	AP74DA3803B620
	MAC Address	Device Name								
No Access Point.										
MAC Address	Device Name									
74:DA:38:03:B6:20	AP74DA3803B620									
<< >>										

Profile Group Settings	
WLAN Group	Assign the access point group's 2.4GHz or 5GHz SSIDs to a WLAN Group. You can edit WLAN groups in NMS Settings → WLAN .
RADIUS Group	Assign the access point group's 2.4GHz SSIDs to a RADIUS group. You can edit RADIUS groups in NMS Settings → RADIUS .
Access Control Group	Assign the access point's 2.4GHz SSIDs to a RADIUS group. You can edit RADIUS groups in NMS Settings → Access Control .

IV-5-2. WLAN

Displays information about each WLAN and WLAN group in the local network and allows you to add or edit WLANs & WLAN Groups. When you add a WLAN Group, it will be available for selection in **NMS Settings → Access Point access point Profile Settings**& access point group **Profile Group Settings (IV-5-1.)**

The **search** function can be used to locate a WLAN or WLAN Group. Type in the search box and the list will update:

Search

☐ Match whole words

☐	Name/ESSID	VLAN ID	Authentication	Encryption	Additional Authentication
☐	matt2.4	1	WPA2-PSK	AES	No additional authentication
☐	matt5	1	WPA2-PSK	AES	No additional authentication

Add

Edit

Clone

Delete Selected

Delete All

WLAN Group

Search

☐ Match whole words

☐	Group Name	WLAN members	WLAN member list
☐	Default	0	
☐	WLAN Group 2	1	matt2.4
☐	WLAN Group 3	1	matt5

Add


Edit

Clone

Delete Selected

Delete All

Select a WLAN or WLAN Group using the check-boxes and click “**Edit**” or click “**Add**” to add a new WLAN or WLAN Group:

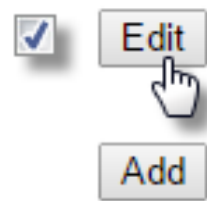

Add/Edit WLAN

WLAN Settings	
Name/SSID	matt2.4
Description	Created by Wizard
VLAN ID	1
Broadcast SSID	Enable
Wireless Client Isolation	Disable
Load Balancing	50 /50
Authentication Method	WPA-PSK
WPA Type	WPA2 Only
Encryption Type	AES
Key Renewal Interval	60 minute(s)
Pre-shared Key Type	Passphrase
Pre-shared Key	abcd1234
Additional Authentication	No additional authentication

WLAN Advanced Settings	
Smart Handover Settings	
Smart Handover	☐ Enable ☒ Disable
RSSI Threshold	-80 dB

WLAN Settings	
Name/SSID	Edit the WLAN name (SSID).
Description	Enter a description of the SSID for reference e.g. 2 nd Floor Office HR.
SSID	Select which SSID to configure security settings for.
VLAN ID	Specify the VLAN ID.
Broadcast SSID	Enable or disable SSID broadcast. When enabled, the SSID will be visible to clients as an available Wi-Fi network. When disabled, the SSID will not be visible as an available Wi-Fi network to clients – clients must manually enter the SSID in order to connect. A hidden (disabled) SSID is typically more secure than a visible (enabled) SSID.
Wireless Client Isolation	Enable or disable wireless client isolation. Wireless client isolation prevents clients connected to the access point from communicating with each other and improves security. Typically, this function is useful for corporate environments or public hot spots and can prevent brute force attacks on

	clients' usernames and passwords.
Load Balancing	Load balancing limits the number of wireless clients connected to an SSID. Set a load balancing value (maximum 50).
Authentication Method	Select an authentication method from the drop down menu.
Additional Authentication	Select an additional authentication method from the drop down menu.

Various security options (wireless data encryption) are available. When data is encrypted, information transmitted wirelessly cannot be read by anyone who does not know the correct encryption key.



It's essential to configure wireless security in order to prevent unauthorised access to your network.



Select hard-to-guess passwords which include combinations of numbers, letters and symbols, and change your password regularly.

Please refer to **IV-6-2-3.Security** for more information on authentication and additional authentication types.

WLAN Advanced Settings	
RSSI Threshold	Set a RSSI Threshold level.

Add/Edit WLAN Group

When you add a WLAN Group, it will be available for selection in **NMS Settings → Access Point** access point **Profile Settings**& access point group **Profile Group Settings (IV-5-1.)**

WLAN Group Settings

Name

WLAN Group 2

Description

Created by Wizard

Members

Search

☐ Match whole words

☐	Name/ESSID	☐ Override	VLAN ID
☒	matt2.4	☐ Override	1
☐	matt5	☐ Override	1

WLAN Group Settings	
Name	Edit the WLAN Group name.
Description	Enter a description of the WLAN Group for reference e.g. 2 nd Floor Office HR Group.
Members	Select SSIDs to include in the group using the checkboxes and assign VLAN IDs.

IV-5-3. RADIUS

Displays information about External & Internal RADIUS Servers, Accounts and Groups and allows you to add or edit RADIUS Servers, Accounts & Groups. When you add a RADIUS Group, it will be available for selection in **NMS Settings → Access Point** access point **Profile Settings** & access point group **Profile Group Settings (IV-5-1.)**

The **search** function can be used to locate a RADIUS Server, Account or Group. Type in the search box and the list will update:

Search ☐ Match whole words

Make a selection using the check-boxes and click **“Edit”** or click **“Add”** to add a new WLAN or WLAN Group:



External RADIUS Server

Search

☐ Match whole words

☐	Name	RADIUS server	Authentication Port	Session Timeout
Please add External RADIUS Server setting				

Add

Edit

Clone

Delete Selected

Delete All

Internal RADIUS Server

Search

☐ Match whole words

☐	Name	EAP Authentication	Session Timeout (sec)	Termination-Action
Please add Internal RADIUS Server setting				

Add

Edit

Clone

Delete Selected

Delete All

RADIUS Account

Search

☐ Match whole words

☐	Name	Password
Please add User Account		

Add

Edit

Delete Selected

Delete All

RADIUS Group

Search

☐ Match whole words

☐	Name	2.4GHz	5GHz	RADIUS accounts
Please add RADIUS group setting				

Add

Edit

Clone

Delete Selected

Delete All

Add/Edit External RADIUS Server

External RADIUS Server	
Name	
Description	
RADIUS Server	
Authentication Port	1812
Shared Secret	
Session Timeout	3600 Seconds
Accounting	☒ Enable ☐ Disable
Accounting Port	1813

Name	Enter a name for the RADIUS Server.
Description	Enter a description of the RADIUS Server for reference.
RADIUS Server	Enter the RADIUS server host IP address.
Authentication Port	Set the UDP port used in the authentication protocol of the RADIUS server. Value must be between 1 – 65535.
Shared Secret	Enter a shared secret/password between 1 – 99 characters in length. This should match the “MAC-RADIUS” password used in IV-3-1-3-6 or IV-3-2-3 .
Session Timeout	Set a duration of session timeout in seconds between 0 – 86400.
Accounting	Enable or disable RADIUS accounting.
Accounting Port	When accounting is enabled (above), set the UDP port used in the accounting protocol of the RADIUS server. Value must be between 1 – 65535.

Upload EAP Certificate File	
EAP Certificate File Format	PKCS#12(*.pfx/*.p12)
Upload EAP Certificate File	Choose File No file chosen
Password of EAP Certificate File	
Upload	

Internal RADIUS Server	
Name	
Description	
EAP Internal Authentication	PEAP(MS-PEAP) ▼
Shared Secret	
Session-Timeout	3600 Seconds
Termination-Action	☒ Reauthentication (RADIUS-Request) ☐ Not-Reauthentication (Default) ☐ Not-Send

Add/Edit Internal RADIUS Server

Upload EAP Certificate File	
EAP Certificate File Format	Displays the EAP certificate file format: PCK#12(*.pfx/*.p12)
EAP Certificate File	Click “Upload” to open a new window and select the location of an EAP certificate file to use. If no certificate file is uploaded, the internal RADIUS server will use a self-made certificate.

Internal RADIUS Server	
Name	Enter a name for the Internal RADIUS Server.
Description	Enter a description of the Internal RADIUS Server for reference.
EAP Certificate File Format	Displays the EAP certificate file format: PCK#12(*.pfx/*.p12)
EAP Certificate File	Click “Upload” to open a new window and select the location of an EAP certificate file to use. If no certificate file is uploaded, the internal RADIUS server will use a self-made certificate.
EAP Internal Authentication	Select EAP internal authentication type from the drop down menu.

Shared Secret	Enter a shared secret/password for use between the internal RADIUS server and RADIUS client. The shared secret should be 1 – 99 characters in length.
Session Timeout	Set a duration of session timeout in seconds between 0 – 86400.
Termination Action	Select a termination-action attribute: “Reauthentication” sends a RADIUS request to the access point, “Not-Reauthentication” sends a default termination-action attribute to the access point, “Not-Send” no termination-action attribute is sent to the access point.

Add/Edit RADIUS Accounts

The internal RADIUS server can authenticate up to 256 user accounts. The “RADIUS Accounts” page allows you to configure and manage users.

RADIUS Accounts

User Name

Example: USER1, USER2, USER3, USER4

Enter username here

Add Reset

User Registration List

Select	User Name	Password	Customize
☐	Edimax	Not Configured	Edit

Delete Selected Delete All

Edit User Registration List

User Name Edimax (4-16characters)

Password (6-32characters)

RADIUS Accounts	
User Name	Enter the user names here, separated by commas.
Add	Click “Add” to add the user to the user registration list.
Reset	Clear text from the user name box.

User Registration List	
Select	Check the box to select a user.
User Name	Displays the user name.
Password	Displays if specified user name has a password (configured) or not (not configured).
Customize	Click “Edit” to open a new field to set/edit a password for the specified user name (below).

Delete Selected	Delete selected user from the user registration list.
Delete All	Delete all users from the user registration list.

Edit User Registration List	
User Name	Existing user name is displayed here and can be edited according to your preference.
Password	Enter or edit a password for the specified user.

Add/Edit RADIUS Group

When you add a RADIUS Group, it will be available for selection in **NMS Settings → Access Point** access point **Profile Settings**& access point group **Profile Group Settings (IV-5-1.)**

RADIUS Group Settings

Group Name

Description

2.4GHz RADIUS

Primary : Disabled Secondary : Disabled

5GHz RADIUS

Primary : Disabled Secondary : Disabled

Members

Search

Match whole words

Username

Password

Add

RADIUS Group Settings	
Group Name	Edit the RADIUS Group name.
Description	Enter a description of the RADIUS Group for reference.
2.4GHz RADIUS	Enable/Disable primary & secondary RADIUS servers for 2.4GHz.
5GHz RADIUS	Enable/Disable primary & secondary RADIUS servers for 5GHz.
Members	Add RADIUS user accounts to the RADIUS group(Maximun 5).

IV-5-4. Access Control

MAC Access Control is a security feature that can help to prevent unauthorized users from connecting to your access point.

This function allows you to define a list of network devices permitted to connect to the access point. Devices are each identified by their unique MAC address. If a device which is not on the list of permitted MAC addresses attempts to connect to the access point, it will be denied.

The Access Control panel displays information about MAC Access Control & MAC Access Control Groups and Groups and allows you to add or edit MAC Access Control & MAC Access Control Group settings. When you add an Access Control Group, it will be available for selection in **NMS Settings → Access Point** access point **Profile Settings** & access point group **Profile Group Settings (IV-5-1.)**

The **search** function can be used to locate a MAC address or MAC Access Control Group. Type in the search box and the list will update:



Make a selection using the check-boxes and click “**Edit**” or click “**Add**” to add a new MAC Address or MAC Access Control Group:



MAC Access Control
Search ☐ Match whole words

☐	MAC Address	Description
Please add MAC Access Control setting		

MAC Access Control Group
Search ☐ Match whole words

☐	Group Name	Policy	Members
☐	Default	Blacklist	0

Add/Edit MAC Access Control

MAC Access Control

Add MAC Address

Remain entries (256)

Add

Reset

MAC Access Control List

MAC Address	Description	Delete
Please add MAC Addresses		

Add MAC Address	Enter a MAC address of computer or network device manually e.g. ‘aa-bb-cc-dd-ee-ff’ or enter multiple MAC addresses separated with commas, e.g. ‘aa-bb-cc-dd-ee-ff,aa-bb-cc-dd-ee-gg’
Add	Click “Add” to add the MAC address to the MAC address filtering table.
Reset	Clear all fields.

MAC address entries will be listed in the “MAC Address Filtering Table”. Select an entry using the “Select” checkbox.

Select	Delete selected or all entries from the table.
MAC Address	The MAC address is listed here.
Delete Selected	Delete the selected MAC address from the list.
Delete All	Delete all entries from the MAC address filtering table.
Export	Click “Export” to save a copy of the MAC filteringtable. A new window will pop up for you to select a location to save the file.

Add/Edit MAC Access Control Group

When you add an Access Control Group, it will be available for selection in **NMS Settings → Access Point** access point **Profile Settings**& access point group **Profile Group Settings (IV-5-1.)**

MAC Filter Group Settings

Group Name

Please enter a new group name

Description

Please enter a new group description

Action

Blacklist ▾

Members

Search

☐ Match whole words

☐

MAC Address

Description

No MAC Access Control Profile

MAC Filter Group Settings	
Group Name	Edit the MAC Access Control Group name.
Description	Enter a description of the MAC Access Control Group for reference.
Action	Select “Blacklist” to deny access to specified MAC addresses in the group, and select “Whitelist” to permit access to specified MAC address in the group.
Members	Add MAC addresses to the group.

IV-5-5. Firmware Upgrade

Firmware Upgrade allows you to upgrade firmware to Access Point Groups. First, upload the firmware file from a local disk or external FTP server: locate the file and click “Upload” or “Check”. The table below will display the *Firmware Name, Firmware Version, NMS Version, Model and Size*.

Then click “Upgrade All” to upgrade all access points in the Array or select Access Point groups from the list using check-boxes and click “Upgrade Selected” to upgrade only selected access points.

Firmware Upgrade

Local

External FTP Server

Firmware Update File

FTP Server Address

Username

Password

Show password

Check

Firmware Name	Firmware Version	NMS Version	Model	Size (bytes)

Access Point Groups									
	Group Name	MAC Address	Device Name	Model	IP Address	Status	Firmware Version	NMS Version	Progress
	System Default (0)								
No Access Point in this group.									
	AP Group 02 (1)								
☐		74:DA:38:03:B6:20	AP74DA3803B620	WAP1750	192.168.8.21		0.9.8	0.9.8.1	0%

IV-5-6. Advanced

IV-5-6-1. System Security

Configure the NMS system login name and password.

System Security	
NMS System Name	administrator
NMS Security Key	1234567890123456 (8~16 Characters)
Apply	

IV-6. Local Network

IV-6-1. Network Settings

IV-6-1-1. LAN-Side IP Address

The “LAN-side IP address” page allows you to configure your AP Controller on your Local Area Network (LAN). You can enable the access point to dynamically receive an IP address from your router’s DHCP server or you can specify a static IP address for your access point, as well as configure DNS servers. You can also set your AP Controller as a DHCP server to assign IP addresses to other devices on your LAN.



The access point’s default IP address is 192.168.2.2



Disable other DHCP servers on the LAN if using AP Controllers DHCP Server.

LAN-side IP Address	
IP Address Assignment	Static IP Address ▾
IP Address	192.168.222.220
Subnet Mask	255.255.255.0
Default Gateway	192.168.222.1
Primary DNS Address	0.0.0.0
Secondary DNS Address	0.0.0.0

LAN-side IP Address	
IP Address Assignment	Select “Static IP” to manually specify a static/fixed IP address for your access point. Select “DHCP Client” for your access point to be assigned a dynamic IP address from your router’s DHCP server, or select “DHCP Server” for your access point to act as a DHCP server and assign IP addresses on your LAN.

Static IP Address	
IP Address	Specify the IP address here. This IP address will be assigned to your access point and will replace the default IP address.
Subnet Mask	Specify a subnet mask. The default value is 255.255.255.0
Default Gateway	For DHCP users, select “From DHCP” to get default gateway from your DHCP server or “User-Defined” to enter a gateway manually. For static IP users, the default value is blank.
Primary DNS Address	For static IP users, the default value is blank.
Secondary DNS Address	For static IP users, the default value is blank.

LAN-side IP Address	
IP Address Assignment	DHCP Client ▼
IP Address	192.168.222.220
Subnet Mask	255.255.255.0
Default Gateway	From DHCP ▼ 192.168.222.1
Primary DNS Address	From DHCP ▼ 0.0.0.0
Secondary DNS Address	From DHCP ▼ 0.0.0.0

DHCP Client	
IP Address	When “DHCP Client” is selected this value cannot be modified.
Subnet Mask	When “DHCP Client” is selected this value cannot be modified.
Default Gateway	Select “From DHCP” or select “User-Defined” and enter a default gateway.
Primary DNS Address	Select “From DHCP” or select “User-Defined” and enter a primary DNS address.
Secondary DNS Address	Select “From DHCP” or select “User-Defined” and enter a secondary DNS address.

LAN-side IP Address	
IP Address Assignment	DHCP Server ▼
IP Address	192.168.222.220
Subnet Mask	255.255.255.0
IP Address Range	192.168.222.120 ~ 192.168.222.140
Domain Name	WAP1750
Lease Time	Forever ▼
Default Gateway	192.168.222.1
Primary DNS Address	0.0.0.0
Secondary DNS Address	0.0.0.0

DHCP Server Static IP Address			
Index	MAC Address	IP Address	Action
1			Add

DHCP Client List			
Index	MAC Address	IP Address	Lease Time
No DHCP Client			

DHCP Server	
IP Address	Specify the IP address here. This IP address will be assigned to your access point and will replace the default IP address.
Subnet Mask	Specify a subnet mask. The default value is 255.255.255.0
IP Address Range	Enter the start and end IP address of the IP address range which your access point's DHCP server will assign to devices on the network.
Domain Name	Enter a domain name.
Lease Time	Select a lease time from the drop down menu. IP addresses will be assigned for this period of time.
Default Gateway	Enter a default gateway.
Primary DNS Address	Enter a primary DNS address.
Secondary DNS Address	Enter a secondary DNS address.

Your access point's DHCP server can be configured to assign static (fixed) IP addresses to specified network devices, identified by their unique MAC address:

DHCP Server Static IP Address	
MAC Address	Enter the MAC address of the network device to be assigned a static IP address.
IP Address	Specify the IP address to assign the device.
Add	Click to assign the IP address to the device.

IV-6-1-2. LAN Port Settings

The “LAN Port” page allows you to configure the settings for your AP Controllers wired LAN (Ethernet) ports.

Wired LAN Port Settings				
Wired LAN Port	Enable	Speed & Duplex	Flow Control	802.3az
Wired Port (#1)	Enabled ▾	Auto ▾	Enabled ▾	Enabled ▾
Wired Port (#2)	Enabled ▾	Auto ▾	Enabled ▾	Enabled ▾

Wired LAN Port	Identifies LAN port 1 or 2.
Enable	Enable/disable specified LAN port.
Speed & Duplex	Select a speed & duplex type for specified LAN port, or use the “Auto” value. LAN ports can operate up to 1000Mbps and full-duplex enables simultaneous data packets transfer/receive.
Flow Control	Enable/disable flow control. Flow control can pause new session request until current data processing is complete, in order to avoid device overloads under heavy traffic.
802.3az	Enable/disable 802.3az. 802.3az is an Energy Efficient Ethernet feature which disables unused interfaces to reduce power usage.

IV-6-1-3. VLAN

The “VLAN” (Virtual Local Area Network) page enables you to configure VLAN settings. A VLAN is a local area network which maps workstations virtually instead of physically and allows you to group together or isolate users from each other. VLAN IDs 1 – 4094 are supported.



VLAN IDs in the range 1 – 4094 are supported.

VLAN Interface

Wired LAN Port	VLAN Mode	VLAN ID
Wired Port (#1)	Untagged Port ▾	1
Wired Port (#2)	Untagged Port ▾	1

Wireless 2.4GHz	VLAN Mode	VLAN ID
SSID [AMPED_DNS_TEST]	Untagged Port	1

Management VLAN

VLAN ID	1
---------	------------------------

VLAN Interface	
Wired LAN Port/Wireless	Identifies LAN port 1 or 2 and wireless SSIDs (2.4GHz or 5GHz).
VLAN Mode	Select “Tagged Port” or “Untagged Port” for specified LANinterface.
VLAN ID	Set a VLAN ID for specified interface, if “Untagged Port” is selected.

Management VLAN	
VLAN ID	Specify the VLAN ID of the management VLAN. Only the hosts belonging to the sameVLAN can manage the device.

IV-6-2. 2.4GHz 11bgn

The “2.4GHz 11bgn” menu allows you to view and configure information for your access point’s 2.4GHz wireless network across four categories: Basic, Advanced, Security and WDS.

IV-6-2-1. Basic

The “Basic” screen displays basic settings for your access point’s 2.4GHz Wi-Fi network(s).

2.4GHz Basic Settings	
Wireless	☒ Enable ☐ Disable
Band	11b/g/n ▼
Enable SSID number	1 ▼
SSID1	AMPED_DNS_TEST VLAN ID 1
Auto Channel	☒ Enable ☐ Disable
Auto Channel Range	Ch 1 - 11 ▼
Auto Channel Interval	One day ▼ ☐ Change channel even if clients are connected
Channel Bandwidth	Auto ▼
BSS BasicRateSet	1,2,5,5,11 Mbps ▼



Auto Channel	☐ Enable ☒ Disable
Channel	Ch 11, 2462MHz ▼
Channel Bandwidth	Auto, +Ch 7 ▼
BSS BasicRateSet	1,2,5,5,11 Mbps ▼

When auto channel is disabled, select a wireless channel manually:

Channel	Select a wireless channel from 1 – 11.
Channel Bandwidth	Set the channel bandwidth: 20MHz (lower performance but less interference), 40MHz (higher performance but potentially higher interference) or Auto (automatically select based on interference level).
BSS BasicRate Set	Set a Basic Service Set (BSS) rate: this is a series of rates to control communication frames for wireless clients.

IV-6-2-2. Advanced

These settings are for experienced users only. Please do not change any of the values on this page unless you are already familiar with these functions.



Changing these settings can adversely affect the performance of your access point.

2.4GHz Advanced Settings	
Contention Slot	Short ▾
Preamble Type	Short ▾
Guard Interval	Short GI ▾
802.11g Protection	☒ Enable ☐ Disable
802.11n Protection	☒ Enable ☐ Disable
DTIM Period	1 (1-255)
RTS Threshold	2347 (1-2347)
Fragment Threshold	2346 (256-2346)
Multicast Rate	Auto ▾
Tx Power	100% ▾
Beacon Interval	100 (40-1000 ms)
Station idle timeout	60 (30-65535 seconds)

Contention Slot	Select “Short” or “Long” – this value is used for contention windows in WMM (see IV-6-7. WMM).
Preamble Type	Set the wireless radio preamble type. The preamble type in 802.11 based wireless communication defines the length of the CRC(Cyclic Redundancy Check)block for communication between the access point and roaming wireless adapters. The default value is “Short Preamble”.
Guard Interval	Set the guard interval.A shorter interval can improve performance.
802.11g Protection	Enable/disable 802.11g protection, which increases reliability but reduces bandwidth (clients will send Request to Send (RTS) to access point, and access point will broadcast Clear to Send (CTS), before a packet is sent from client.)

802.11n Protection	Enable/disable 802.11n protection, which increases reliability but reduces bandwidth (clients will send Request to Send (RTS) to access point, and access point will broadcast Clear to Send (CTS), before a packet is sent from client.)
DTIM Period	Set the DTIM (delivery traffic indication message) period value of the wireless radio. The default value is 1.
RTS Threshold	Set the RTS threshold of the wireless radio. The default value is 2347.
Fragment Threshold	Set the fragment threshold of the wireless radio. The default value is 2346.
Multicast Rate	Set the transfer rate for multicast packets or use the "Auto" setting.
Tx Power	Set the power output of the wireless radio. You may not require 100% output power. Setting a lower power output can enhance security since potentially malicious/unknown users in distant areas will not be able to access your signal.
Beacon Interval	Set the beacon interval of the wireless radio. The default value is 100.
Station idle timeout	Set the interval for keepalive messages from the access point to a wireless client to verify if the station is still alive/active.

IV-6-2-3. Security

The access point provides various security options (wireless data encryption). When data is encrypted, information transmitted wirelessly cannot be read by anyone who does not know the correct encryption key.



It's essential to configure wireless security in order to prevent unauthorised access to your network.



Select hard-to-guess passwords which include combinations of numbers, letters and symbols, and change your password regularly.

2.4GHz Wireless Security Settings	
SSID	AMPED_DNS_TEST ▾
Broadcast SSID	Enable ▾
Wireless Client Isolation	Disable ▾
Load Balancing	50 /50
Authentication Method	No Authentication ▾
Additional Authentication	No additional authentication ▾

SSID	Select which SSID to configure security settings for.
Broadcast SSID	Enable or disable SSID broadcast. When enabled, the SSID will be visible to clients as an available Wi-Fi network. When disabled, the SSID will not be visible as an available Wi-Fi network to clients – clients must manually enter the SSID in order to connect. A hidden (disabled) SSID is typically more secure than a visible (enabled) SSID.
Wireless Client Isolation	Enable or disable wireless client isolation. Wireless client isolation prevents clients connected to the access point from communicating with each other and improves security. Typically, this function is useful for corporate environments or public hot spots and can prevent brute force attacks on clients' usernames and passwords.

Load Balancing	Load balancing limits the number of wireless clients connected to an SSID. Set a load balancing value (maximum 50).
Authentication Method	Select an authentication method from the drop down menu and refer to the information below appropriate for your method.
Additional Authentication	Select an additional authentication method from the drop down menu and refer to the information below (IV-6-2-3-6.) appropriate for your method.

IV-6-2-3-1. No Authentication

Authentication is disabled and no password/key is required to connect to the access point.



Disabling wireless authentication is not recommended. When disabled, anybody within range can connect to your device's SSID.

IV-6-2-3-2. WEP

WEP (Wired Equivalent Privacy) is a basic encryption type. For a higher level of security consider using WPA encryption.

Key Length	Select 64-bit or 128-bit. 128-bit is more secure than 64-bit and is recommended.
Key Type	Choose from "ASCII" (any alphanumeric character 0-9, a-z and A-Z) or "Hex" (any characters from 0-9, a-f and A-F).
Default Key	Select which encryption key (1 – 4 below) is the default key. For security purposes, you can set up to four keys (below) and change which is the default key.
Encryption Key 1 – 4	Enter your encryption key/password according to the format you selected above.

IV-6-2-3-3. IEEE802.1x/EAP

Key Length	Select 64-bit or 128-bit. 128-bit is more secure than 64-bit and is recommended.
-------------------	--

IV-6-2-3-4. WPA-PSK

WPA-PSK is a secure wireless encryption type with strong data protection and user authentication, utilizing 128-bit encryption keys.

WPA Type	Select from WPA/WPA2 Mixed Mode-PSK, WPA2 or WPA only. WPA2 is safer than WPA only, but not supported by all wireless clients. Please make sure your wireless client supports your selection.
Encryption	Select “TKIP/AES Mixed Mode” or “AES” encryption type.
Key Renewal Interval	Specify a frequency for key renewal in minutes.
Pre-Shared Key Type	Choose from “Passphrase” (8 – 63 alphanumeric characters) or “Hex” (up to 64 characters from 0-9,a-f andA-F).
Pre-Shared Key	Please enter a security key/password according to the format you selected above.

IV-6-2-3-5. WPA-EAP

WPA Type	Select from WPA/WPA2 Mixed Mode-EAP, WPA2-EAP or WPA-EAP.
Encryption	Select “TKIP/AES Mixed Mode” or “AES” encryption type.
Key Renewal Interval	Specify a frequency for key renewal in minutes.



WPA-EAP must be disabled to use MAC-RADIUS authentication.

IV-6-2-3-6. Additional Authentication

Additional wireless authentication methods can also be used:

MAC Address Filter

Restrict wireless clients access based on MAC address specified in the MAC filter table.



See IV-6-6.MAC Filter to configure MAC filtering.

MAC Filter & MAC-RADIUS Authentication

Restrict wireless clients access using both of the above MAC filtering & RADIUS authentication methods.

MAC-RADIUS Authentication

Restrict wireless clients access based on MAC address via a RADIUS server, or password authentication via a RADIUS server.



See IV-6-5.RADIUS to configure RADIUS servers.



WPS must be disabled to use MAC-RADIUS authentication. See IV-6-4. for WPS settings.

MAC RADIUS Password

☒ Use MAC address

☐ Use the following password

MAC RADIUS Password	Select whether to use MAC address or password authentication via RADIUS server. If you select “Use the following password”, enter the password in the field below. The password should match the “Shared Secret” used in IV-6-5. RADIUS.
----------------------------	---

IV-6-2-4. WDS

Wireless Distribution System (WDS) can bridge/repeat access points together in an extended network. WDS settings can be configured as shown below.



When using WDS, configure the IP address of each access point to be in the same subnet and ensure there is only one active DHCP server among connected access points, preferably on the WAN side.

WDS must be configured on each access point, using correct MAC addresses. All access points should use the same wireless channel and encryption method.

2.4GHz	
WDS Functionality	Disabled ▼
Local MAC Address	Disabled WDS with AP Dedicated WDS

WDS Peer Settings	
WDS #1	MAC Address
WDS #2	MAC Address
WDS #3	MAC Address
WDS #4	MAC Address

WDS VLAN	
VLAN Mode	Untagged Port ▼ (Enter at least one MAC address.)
VLAN ID	1

WDS Encryption method	
Encryption	None ▼ (Enter at least one MAC address.)

2.4GHz	
WDS Functionality	Select “WDS with AP” to use WDS with access point or “WDS Dedicated Mode” to use WDS and also block communication with regular wireless clients. When WDS is used, each access point should be configured with corresponding MAC addresses, wireless channel and wireless encryption method.
Local MAC Address	Displays the MAC address of your access point.

WDS Peer Settings	
WDS #	Enter the MAC address for up to four other WDS devices you wish to connect.

WDS VLAN	
VLAN Mode	Specify the WDS VLAN mode to “Untagged Port” or “Tagged Port”.
VLAN ID	Specify the WDS VLAN ID when “Untagged Port” is selected above.

WDS Encryption method	
Encryption	Select whether to use “None” or “AES” encryption and enter a pre-shared key for AESconsisting of 8-63 alphanumeric characters.

IV-6-3. 5GHz 11ac 11an

The “5GHz 11ac 11an” menu allows you to view and configure information for your access point’s 5GHz wireless network across four categories: Basic, Advanced, Security and WDS.

IV-6-3-1. Basic

The “Basic” screen displays basic settings for your access point’s 5GHz Wi-Fi network (s).

5GHz Basic Settings

Wireless	☐ Enable ☒ Disable	
Band	11a/n/ac	
Enable SSID number	1	
SSID1	WAP1750-03EC1A_A	VLAN ID 1
Auto Channel	☒ Enable ☐ Disable	
Auto Channel Range	Band 1	
Auto Channel Interval	One day	
	☐ Change channel even if clients are connected	
Channel Bandwidth	Auto 80/40/20 MHz	
BSS BasicRateSet	6,12,24 Mbps	

Auto Channel	☐ Enable ☒ Disable
Channel	Ch 36, 5.18GHz
Channel Bandwidth	Auto 80/40/20 MHz
BSS BasicRateSet	6,12,24 Mbps

Wireless	Enable or disable the access point’s 5GHz wireless radio. When disabled, no 5GHz SSIDs will be active.
Band	Select the wireless standard used for the access point. Combinations of 802.11a,

	802.11n & 802.11ac can be selected.
Enable SSID Number	Select how many SSIDs to enable for the 5GHz frequency from the drop down menu. A maximum of 16 can be enabled.
SSID#	Enter the SSID name for the specified SSID (up to 16). The SSID can consist of any combination of up to 32 alphanumeric characters.
VLAN ID	Specify a VLAN ID for each SSID.
Auto Channel	Enable/disable auto channel selection. Auto channel selection will automatically set the wireless channel for the access point's 5GHz frequency based on availability and potential interference. When disabled, select a channel manually as shown in the next table.
Auto Channel Range	Select a range from which the auto channel setting (above) will choose a channel.
Auto Channel Interval	Specify a frequency for how often the auto channel setting will check/reassign the wireless channel. Check/uncheck the "Change channel even if clients are connected" box according to your preference.
Channel Bandwidth	Set the channel bandwidth: 20MHz (lower performance but less interference), Auto 40/20MHz or Auto 80/40/20MHz (automatically select based on interference level).
BSS BasicRate Set	Set a Basic Service Set (BSS) rate: this is a series of rates to control communication frames for wireless clients.

When auto channel is disabled, select a wireless channel manually:

Channel	Select a wireless channel.
Channel Bandwidth	Set the channel bandwidth: 20MHz (lower performance but less interference), Auto 40/20MHz or Auto 80/40/20MHz (automatically select based on interference level).
BSS BasicRate Set	Set a Basic Service Set (BSS) rate: this is a series of rates to control communication

	frames for wireless clients.
--	------------------------------

IV-6-3-2. Advanced

These settings are for experienced users only. Please do not change any of the values on this page unless you are already familiar with these functions.



Changing these settings can adversely affect the performance of your access point.

5GHz Advanced Settings	
Guard Interval	Short GI ▾
802.11n Protection	☒ Enable ☐ Disable
DTIM Period	1 (1-255)
RTS Threshold	2347 (1-2347)
Fragment Threshold	2346 (256-2346)
Multicast Rate	Auto ▾
Tx Power	100% ▾
Beacon Interval	100 (40-1000 ms)
Station idle timeout	60 (30-65535 seconds)

Guard Interval	Set the guard interval.A shorter interval can improve performance.
802.11n Protection	Enable/disable 802.11n protection, which increases reliability but reduces bandwidth (clients will send Request to Send (RTS) to access point, and access point will broadcast Clear to Send (CTS), before a packet is sent from client.)
DTIM Period	Set the DTIM (delivery traffic indication message) period value of the wireless radio. The default value is 1.
RTS Threshold	Set the RTS threshold of the wireless radio. The default value is 2347.
Fragment Threshold	Set the fragment threshold of the wireless radio. The default value is 2346.
Multicast Rate	Set the transfer rate for multicast packets or use the “Auto” setting.
Tx Power	Set the power output of the wireless radio. You may not require 100% output power.Setting a lower power output can enhance security since potentially malicious/unknown users in distantareas will not be able to access your signal.

Beacon Interval	Set the beacon interval of the wireless radio. The default value is 100.
Station idle timeout	Set the interval for keepalive messages from the access point to a wireless client to verify if the station is still alive/active.

IV-6-3-3. Security

The access point provides various security options (wireless data encryption). When data is encrypted, information transmitted wirelessly cannot be read by anyone who does not know the correct encryption key.



It's essential to configure wireless security in order to prevent unauthorised access to your network.



Select hard-to-guess passwords which include combinations of numbers, letters and symbols, and change your password regularly.

5GHz Wireless Security Settings	
SSID	WAP1750-03EC1A_A ▼
Broadcast SSID	Enable ▼
Wireless Client Isolation	Disable ▼
Load Balancing	50 /50
Authentication Method	No Authentication ▼
Additional Authentication	No additional authentication ▼

SSID	Select which SSID to configure security settings for.
Broadcast SSID	Enable or disable SSID broadcast. When enabled, the SSID will be visible to clients as an available Wi-Fi network. When disabled, the SSID will not be visible as an available Wi-Fi network to clients – clients must manually enter the SSID in order to connect. A hidden (disabled) SSID is typically more secure than a visible (enabled) SSID.
Wireless Client Isolation	Enable or disable wireless client isolation. Wireless client isolation prevents clients connected to the access point from communicating with each other and improves security. Typically, this function is useful for corporate environments or public hot spots and can prevent brute force attacks on clients' usernames and passwords.

Load Balancing	Load balancing limits the number of wireless clients connected to an SSID. Set a load balancing value (maximum 50).
Authentication Method	Select an authentication method from the drop down menu and refer to the information below appropriate for your method.
Additional Authentication	Select an additional authentication method from the drop down menu and refer to the information below appropriate for your method.

Please refer back to **IV-6-2-3. Security** for more information on authentication and additional authentication types.

IV-6-3-4. WDS

Wireless Distribution System (WDS) can bridge/repeat access points together in an extended network. WDS settings can be configured as shown below.



When using WDS, configure the IP address of each access point to be in the same subnet and ensure there is only one active DHCP server among connected access points, preferably on the WAN side.

WDS must be configured on each access point, using correct MAC addresses. All access points should use the same wireless channel and encryption method.

5GHz WDS Mode

WDS Functionality

Disabled

Disabled

WDS with AP

Dedicated WDS

Local MAC Address

WDS Peer Settings

WDS #1

MAC Address

WDS #2

MAC Address

WDS #3

MAC Address

WDS #4

MAC Address

WDS VLAN

VLAN Mode

Untagged Port

(Enter at least one MAC address.)

VLAN ID

1

Encryption method

Encryption

None

(Enter at least one MAC address.)

5GHz WDS Mode	
WDS Functionality	Select “WDS with AP” to use WDS with access point or “WDS Dedicated Mode” to use WDS and also block communication with regular wireless clients. When WDS is used, each access point should be configured with corresponding MAC addresses, wireless channel and wireless encryption method.
Local MAC Address	Displays the MAC address of your access point.

WDS Peer Settings	
WDS #	Enter the MAC address for up to four other WDA devices you wish to connect.

WDS VLAN	
VLAN Mode	Specify the WDS VLAN mode to “Untagged Port” or “Tagged Port”.
VLAN ID	Specify the WDS VLAN ID when “Untagged Port” is selected above.

WDS Encryption	
Encryption	Select whether to use “None” or “AES” encryption and enter a pre-shared key for AES with 8-63 alphanumeric characters.

IV-6-4. WPS

Wi-Fi Protected Setup is a simple way to establish connections between WPS compatible devices. WPS can be activated on compatible devices by pushing a WPS button on the device or from within the device's firmware/configuration interface (known as PBC or "Push Button Configuration"). When WPS is activated in the correct manner and at the correct time for two compatible devices, they will automatically connect. "PIN code WPS" is a variation of PBC which includes the additional use of a PIN code between the two devices for verification.



Please refer to manufacturer's instructions for your other WPS device.

WPS	☒ Enable
Apply	
WPS	
Product PIN	02570501 Generate PIN
Push-button WPS	Start
WPS by PIN	Start

WPS Security	
WPS Status	Configured Release

WPS	Check/uncheck this box to enable/disable WPS functionality. WPS must be disabled when using MAC-RADIUS authentication (see IV-6-2-3-6. & IV-6-5).
------------	---

Product PIN	Displays the WPS PIN code of the device, used for PIN code WPS. You will be required to enter this PIN code into another WPS device for PIN code WPS. Click "Generate PIN" to generate a new WPS PIN code.
Push-Button WPS	Click "Start" to activate WPS on the access point for approximately 2 minutes. This has the same effect as physically pushing the access point's WPS button.
WPS by PIN	Enter the PIN code of another WPS device and click "Start" to attempt to establish a WPS connection for approximately 2 minutes.

WPS Status	WPS security status is displayed here. Click “Release” to clear the existing status.
-------------------	--

IV-6-5. RADIUS

The RADIUS sub menu allows you to configure the access point’s RADIUS server settings, categorized into three submenus: RADIUS settings, Internal Server and RADIUS accounts.

A RADIUS server provides user-based authentication to improve security and offer wireless client control – users can be authenticated before gaining access to a network.

The access point can utilize both a primary and secondary (backup) RADIUS server for each of its wireless frequencies (2.4GHz & 5GHz). External RADIUS servers can be used or the access point’s internal RADIUS server can be used.



To use RADIUS servers, go to “Local Network” → “Security” → “Additional Authentication” and select “MAC RADIUS Authentication” (see IV-6-2-3.&IV-6-3-3).

IV-6-5-1. RADIUS Settings

Configure the RADIUS server settings for 2.4GHz & 5GHz. Each frequency can use an internal or external RADIUS server.

RADIUS Server (2.4GHz)	
Primary RADIUS Server	
RADIUS Type	☐ Internal ☒ External
RADIUS Server	
Authentication Port	1812
Shared Secret	
Session Timeout	3600 second(s)
Accounting	☒ Enable ☐ Disable
Accounting Port	1813
Secondary RADIUS Server	
RADIUS Type	☐ Internal ☒ External
RADIUS Server	
Authentication Port	1812
Shared Secret	
Session Timeout	3600 second(s)
Accounting	☒ Enable ☐ Disable
Accounting Port	1813

RADIUS Server (5GHz)	
Primary RADIUS Server	
RADIUS Type	☐ Internal ☒ External
RADIUS Server	
Authentication Port	1812
Shared Secret	
Session Timeout	3600 second(s)
Accounting	☒ Enable ☐ Disable
Accounting Port	1813
Secondary RADIUS Server	
RADIUS Type	☐ Internal ☒ External
RADIUS Server	
Authentication Port	1812
Shared Secret	
Session Timeout	3600 second(s)
Accounting	☒ Enable ☐ Disable
Accounting Port	1813

RADIUS Type

Select “Internal” to use the access point’s built-in RADIUS server or “external” to use an external RADIUS server.

RADIUS Server	Enter the RADIUS server host IP address.
Authentication Port	Set the UDP port used in the authentication protocol of the RADIUS server. Value must be between 1 – 65535.
Shared Secret	Enter a shared secret/password between 1 – 99 characters in length. This should match the “MAC-RADIUS” password used in IV-3-1-3-6 or IV-3-2-3 .
Session Timeout	Set a duration of session timeout in seconds between 0 – 86400.
Accounting	Enable or disable RADIUS accounting.
Accounting Port	When accounting is enabled (above), set the UDP port used in the accounting protocol of the RADIUS server. Value must be between 1 – 65535.

IV-6-5-2. Internal Server

The access point features a built-in RADIUS server which can be configured as shown below used when “Internal” is selected for “RADIUS Type” in the “Local Network” → “RADIUS Settings” menu.



To use RADIUS servers, go to “Wireless Settings” → “Security” “Additional Authentication” and select “MAC RADIUS Authentication” (see IV-6-2-3.&IV-6-3-3).

Internal Server	
Internal Server	☐ Enable
EAP Internal Authentication	PEAP(MS-PEAP) ▼
EAP Certificate File Format	PKCS#12(*.pfx/*.*.p12)
EAP Certificate File	Upload
Shared Secret	
Session-Timeout	3600 second(s)
Termination-Action	☒ Reauthentication (RADIUS-Request) ☐ Not-Reauthentication (Default) ☐ Not-Send

Internal Server	Check/uncheck to enable/disable the access point’s internal RADIUS server.
EAP Internal Authentication	Select EAP internal authentication type from the drop down menu.

EAP Certificate File Format	Displays the EAP certificate file format: PCK#12(*.pfx/*.p12)
EAP Certificate File	Click “Upload” to open a new window and select the location of an EAP certificate file to use. If no certificate file is uploaded, the internal RADIUS server will use a self-made certificate.
Shared Secret	Enter a shared secret/password for use between the internal RADIUS server and RADIUS client. The shared secret should be 1 – 99 characters in length. This should match the “MAC-RADIUS” password used in IV-6-2-3-6 or IV-6-3-3 .
Session Timeout	Set a duration of session timeout in seconds between 0 – 86400.
Termination Action	Select a termination-action attribute: “Reauthentication” sends a RADIUS request to the access point, “Not-Reauthentication” sends a default termination-action attribute to the access point, “Not-Send” no termination-action attribute is sent to the access point.

IV-6-5-3. RADIUS Accounts

The internal RADIUS server can authenticate up to 256 user accounts. The “RADIUS Accounts” page allows you to configure and manage users.

RADIUS Accounts

User Name

Example: USER1, USER2, USER3, USER4

Enter username here

Add

Reset

User Registration List

Select	User Name	Password	Customize
☐	Edimax	Not Configured	Edit

Delete Selected

Delete All

Edit User Registration List

User Name

Edimax

(4-16characters)

Password

(6-32characters)



User Name	Enter the user names here, separated by commas.
Add	Click “Add” to add the user to the user registration list.
Reset	Clear text from the user name box.

Select	Check the box to select a user.
User Name	Displays the user name.
Password	Displays if specified user name has a password (configured) or not (not configured).
Customize	Click “Edit” to open a new field to set/edit a password for the specified user name (below).

Delete Selected	Delete selected user from the user registration list.
Delete All	Delete all users from the user registration list.

Edit User Registration List

User Name	Existing user name is displayed here and can be edited according to your preference.
Password	Enter or edit a password for the specified user.

IV-6-6. MAC Filter

Mac filtering is a security feature that can help to prevent unauthorized users from connecting to your access point.

This function allows you to define a list of network devices permitted to connect to the access point. Devices are each identified by their unique MAC address. If a device which is not on the list of permitted MAC addresses attempts to connect to the access point, it will be denied.



To enable MAC filtering, go to “Local Settings” → “Security” → “Additional Authentication” and select “MAC Filter” (see IV-6-2-3.&IV-6-3-3).

The MAC address filtering table is displayed below:

Add MAC Addresses

Add

Reset

MAC Address Filtering Table

Select	MAC Address
☐	FC:F8:AE:43:43:7E

Delete Selected

Delete All

Export

Add MAC Address	Enter a MAC address of computer or network device manually e.g. 'aa-bb-cc-dd-ee-ff' or enter multiple MAC addresses separated with commas, e.g. 'aa-bb-cc-dd-ee-ff,aa-bb-cc-dd-ee-gg'
Add	Click "Add" to add the MAC address to the MAC address filtering table.
Reset	Clear all fields.

MAC address entries will be listed in the "MAC Address Filtering Table". Select an entry using the "Select" checkbox.

Select	Delete selected or all entries from the table.
MAC Address	The MAC address is listed here.
Delete Selected	Delete the selected MAC address from the list.
Delete All	Delete all entries from the MAC address filtering table.
Export	Click "Export" to save a copy of the MAC filteringtable. A new window will pop up for you to select a location to save the file.

IV-6-7. WMM

Wi-Fi Multimedia (WMM) is a Wi-Fi Alliance interoperability certification based on the IEEE 802.11e standard, which provides Quality of Service (QoS) features to IEEE 802.11 networks. WMM prioritizes traffic according to four categories: background, best effort, video and voice.

WMM-EDCA Settings				
WMM Parameters of Access Point				
	CWMin	CWMax	AIFSN	TxOP
Back Ground	4	10	7	0
Best Effort	4	6	3	0
Video	3	4	1	94
Voice	2	3	1	47

WMM Parameters of Station				
	CWMin	CWMax	AIFSN	TxOP
Back Ground	4	10	7	0
Best Effort	4	10	3	0
Video	3	4	2	94
Voice	2	3	2	47

Configuring WMM consists of adjusting parameters on queues for different categories of wireless traffic. Traffic is sent to the following queues:

Background	Low Priority	High throughput, non time sensitive bulk data e.g. FTP
Best Effort	Medium Priority	Traditional IP data, medium throughput and delay.
Video	High Priority	Time sensitive video data with minimum time delay.
Voice	High Priority	Time sensitive data such as VoIP and streaming media with minimum time delay.

Queues automatically provide minimum transmission delays for video, voice, multimedia and critical applications. The values can further be adjusted manually:

CWMin	Minimum Contention Window (milliseconds): This value is input to the initial random backoff wait time algorithm for retry of a data frame transmission. The backoff wait time will be generated between 0 and this value. If the frame is not sent, the random backoff value is doubled until the value reaches the number defined by CWMax (below). The CWMin value must be lower than the CWMax value. The contention window scheme helps to avoid frame collisions and determine priority of frame transmission. A shorter window has a higher probability (priority) of transmission.
CWMax	Maximum Contention Window (milliseconds): This value is the upper limit to random backoff value doubling (see above).
AIFSN	Arbitration Inter-Frame Space (milliseconds): Specifies additional time between when a channel goes idle and the AP/client sends data frames. Traffic with a lower AIFSN value has a higher priority.
TxOP	Transmission Opportunity (milliseconds): The maximum interval of time an AP/client can transmit. This makes channel access more efficiently prioritized. A value of 0 means only one frame per transmission. A greater value effects higher priority.

IV-7. Local Settings

IV-7-1. Operation Mode

Set the operation mode of the access point. AP mode is a standalone access point, AP controller mode acts as the designated master of the AP array, and Managed AP mode acts as a slave AP within the AP array.

Operation Mode

Operation Mode

AP Controller Mode ▾

AP Mode

AP Controller Mode

Managed AP mode

Apply

Cancel

IV-7-2. Network Settings

IV-7-2-1. System Information

The “System Information” page displays basic system information about the access point.

System	
Model	WAP1750
Product Name	AP74DA3803EC1A
Uptime	0 day 20:01:40
Boot from	Internal memory
Version	0.9.12
MAC Address	74:DA:38:03:EC:1A
Management VLAN ID	1
IP Address	192.168.222.220
Default Gateway	192.168.222.1
DNS	---
DHCP Server	---

Wired LAN Port Settings					
Wired LAN Port		Status		VLAN Mode/ID	
Wired Port (#1)		Connected (1000 Mbps Full-Duplex)		Untagged Port / 1	
Wired Port (#2)		Disconnected (---)		Untagged Port / 1	

Wireless 2.4GHz	
Status	Enabled
MAC Address	74:DA:38:03:EC:1A
Channel	Ch 6 (Auto)
Transmit Power	100%

Wireless 2.4GHz /SSID					
SSID	Authentication Method	Encryption Type	VLAN ID	Additional Authentication	Wireless Client Isolation
AMPED_DNS_TEST	WPA/WPA2-PSK	TKIP/AES Mixed Mode	1	No additional authentication	Disabled

Wireless 2.4GHz /WDS Disabled		
MAC Address	Encryption Type	VLAN Mode/ID
No WDS entries.		

System	
Model	Displays the model number of the access point.
Product Name	Displays the product name for reference, which consists of “AP” plus the MAC address.
Uptime	Displays the total time since the device was turned on.
Boot From	Displays information for the booted hardware, booted from either USB or internal memory.
Version	Displays the firmware version.
MAC Address	Displays the access point’s MAC address.
Management VLAN ID	Displays the management VLAN ID.
IP Address	Displays the IP address of this device. Click “Refresh” to update this value.
Default Gateway	Displays the IP address of the default gateway.
DNS	IP address of DNS (Domain Name Server)
DHCP Server	IP address of DHCP Server.

Wired LAN Port Settings	
Wired LAN Port	Specifies which LAN port (1 or 2).
Status	Displays the status of the specified LAN port (connected or disconnected).

VLAN Mode/ID	Displays the VLAN mode (tagged or untagged) and VLAN ID for the specified LAN port. See IV-6-1-3. VLAN
---------------------	---

Wireless 2.4GHz (5GHz)	
Status	Displays the status of the 2.4GHz or 5GHz wireless (enabled or disabled).
MAC Address	Displays the access point's MAC address.
Channel	Displays the channel number the specified wireless frequency is using for broadcast.
Transmit Power	Displays the wireless radio transmit power level as a percentage.

Wireless 2.4GHZ (5GHz) / SSID	
SSID	Displays the SSID name(s) for the specified frequency.
Authentication Method	Displays the authentication method for the specified SSID. See IV-6. Wireless Settings
Encryption Type	Displays the encryption type for the specified SSID. See IV-6. Wireless Settings
VLAN ID	Displays the VLAN ID for the specified SSID. See IV-6-1-3. VLAN
Additional Authentication	Displays the additional authentication type for the specified SSID. See IV-6. Wireless Settings
Wireless Client Isolation	Displays whether wireless client isolation is in use for the specified SSID. See IV-6-1-3. VLAN

Wireless 2.4GHZ (5GHz) / WDS Status	
MAC Address	Displays the peer access point's MAC address.
Encryption Type	Displays the encryption type for the specified WDS. See IV-6-2-4. WDS
VLAN Mode/ID	Displays the VLAN ID for the specified WDS. See IV-6-2-4. WDS

Refresh	Click to refresh all information.
----------------	-----------------------------------

IV-7-2-2. Wireless Clients

The “Wireless Clients” page displays information about all wireless clients connected to the access point on the 2.4GHz or 5GHz frequency.

Refresh time

Auto Refresh time

☒ 5 seconds ☐ 1 second ☐ Disable

Manual Refresh

Refresh

2.4GHz WLAN Client Table

#	SSID	MAC Address	Tx	Rx	Signal (%)	Connected Time	Idle Time	Vendor
1	AMPED_DNS_TEST	F8:7B:8C:1F:2D:61	3.6 KBytes	7.6 MBytes	100	14 hours 29 min 30 secs	0	Amped Wireless

5GHz WLAN Client Table

#	SSID	MAC Address	Tx	Rx	Signal (%)	Connected Time	Idle Time	Vendor
No wireless client								

Refresh time

Auto Refresh Time

Select a time interval for the client table list to automatically refresh.

Manual Refresh

Click refresh to manually refresh the client table.

2.4GHz (5GHz) WLAN Client Table

SSID

Displays the SSID which the client is connected to.

MAC Address

Displays the MAC address of the client.

Tx

Displays the total data packets transmitted by the specified client.

Rx

Displays the total data packets received by the specified client.

Signal (%)

Displays the wireless signal strength for the specified client.

Connected Time

Displays the total time the wireless client has been connected to the access point.

Idle Time

Client idle time is the time for which the client has not transmitted any data packets i.e. is idle.

Vendor

The vendor of the client's wireless adapter is displayed here.

IV-7-2-3. Wireless Monitor

Wireless Monitor is a tool built into the access point to scan and monitor the surrounding wireless environment. Select a frequency and click “Scan” to display a list of all SSIDs within range along with relevant details for each SSID.

Wireless Monitor	
Site Survey	☒ Wireless 2.4G/ 5G ☐ 2.4G ☐ 5G Scan
Channel Survey result	Export

Wireless 2.4GHz (112 Accesspoints)						
Ch	SSID	MAC Address	Security	Signal (%)	Type	Vendor
1		00:18:0A:D3:4C:F0	WPA1PSKWPA2PSK /TKIPAES	84	b/g/n	Meraki, Inc.
1	11111	00:AA:BB:02:01:E0	NONE	97	b/g/n	Unknown
1	13213136	26:DA:38:00:20:40	NONE	98	b/g/n	Unknown
1	22222	02:AA:BB:02:01:E0	NONE	96	b/g/n	Unknown
1	EA3500-2.4G	C8:D7:19:2C:9F:1F	WPA2PSK/AES	100	b/g/n	Cisco Consumer Products, LLC

Wireless Monitor	
Site Survey	Select which frequency (or both) to scan, and click “Scan” to begin.
Channel Survey Result	After a scan is complete, click “Export” to save the results to local storage.

Site Survey Results	
Ch	Displays the channel number used by the specified SSID.
SSID	Displays the SSID identified by the scan.
MAC Address	Displays the MAC address of the wireless router/access point for the specified SSID.
Security	Displays the authentication/encryption type of the specified SSID.
Signal (%)	Displays the current signal strength of the SSID.
Type	Displays the 802.11 wireless networking standard(s) of the specified SSID.
Vendor	Displays the vendor of the wireless router/access point for the specified SSID.

IV-7-2-4. Log

The system log displays system operation information such as up time and connection processes. This information is useful for network administrators.



When the log is full, old entries are overwritten.

```
Jan 1 00:00:51 [SYSTEM]: WLAN[2.4G], Best channel selection start, switch to channel 6
Jan 1 00:00:47 [SYSTEM]: WLAN[2.4G], Best channel selection start, switch to channel 6
Jan 1 00:00:15 [NMS]: start AP Controller successfully
Jan 1 00:00:14 [NMS]: NMS version: 0.9.12.1
Jan 1 00:00:14 [SYSTEM]: Auto Pilot, Stopping
Jan 1 00:00:14 [SYSTEM]: FTP Server, start
Jan 1 00:00:14 [SYSTEM]: TELNETD, start Telnet-cli Server
Jan 1 00:00:14 [SYSTEM]: HTTPS, start
Jan 1 00:00:14 [SYSTEM]: HTTP, start
Jan 1 00:00:13 [SYSTEM]: LAN, Firewall Disabled
Jan 1 00:00:13 [SYSTEM]: LAN, NAT Disabled
Jan 1 00:00:13 [SYSTEM]: NET, Firewall Disabled
Jan 1 00:00:13 [SYSTEM]: NET, NAT Disabled
Jan 1 00:00:13 [SYSTEM]: LEDs, light on specific LEDs
Jan 1 00:00:11 [SYSTEM]: WLAN[5G], Channel = AutoSelect
Jan 1 00:00:11 [SYSTEM]: WLAN[5G], Wireless Mode = 11ACVHT80
Jan 1 00:00:03 [SYSTEM]: WLAN[2.4G], Channel = AutoSelect
Jan 1 00:00:03 [SYSTEM]: WLAN[2.4G], Wireless Mode = 11NGHT40MINUS
Jan 1 00:00:03 [SYSTEM]: LAN, IP address=192.168.222.220
Jan 1 00:00:03 [SYSTEM]: LAN, start
Jan 1 00:00:02 [SYSTEM]: Bridge, start
Jan 1 00:00:02 [SYSTEM]: Bridge, start
Jan 1 00:00:00 [SYSTEM]: SYS, Model Name: Wireless Gigabit Router
Jan 1 00:00:00 [SYSTEM]: SYS, Application Version: 0.9.12
Jan 1 00:00:00 [SYSTEM]: BOOT, WAP1750
```

Save

Clear

Refresh

Save	Click to save the log as a file on your local computer.
Clear	Clear all log entries.
Refresh	Refresh the current log.

The following information/events are recorded by the log:

- ◆ **USB**
Mount & unmount
- ◆ **Wireless Client**
Connected & disconnected
Key exchange success & fail
- ◆ **Authentication**
Authentication fail or successful.
- ◆ **Association**
Success or fail
- ◆ **WPS**
M1 - M8 messages
WPS success
- ◆ **Change Settings**
- ◆ **System Boot**
Displays current model name
- ◆ **NTP Client**
- ◆ **Wired Link**
LAN Port link status and speed status
- ◆ **Proxy ARP**
Proxy ARP module start & stop
- ◆ **Bridge**
Bridge start & stop.
- ◆ **SNMP**
SNMP server start & stop.
- ◆ **HTTP**
HTTP start & stop.
- ◆ **HTTPS**
HTTPS start & stop.
- ◆ **SSH**
SSH-client server start & stop.
- ◆ **Telnet**
Telnet-client server start or stop.
- ◆ **WLAN (2.4G)**
WLAN (2.4G) channel status and country/region status
- ◆ **WLAN (5G)**
WLAN (5G) channel status and country/region status
- ◆ **ADT**

IV-7-3. Management

IV-7-3-1. Admin

You can change the password used to login to the browser-based configuration interface here. It is advised to do so for security purposes.



If you change the administrator password, please make a note of the new password. In the event that you forget this password and are unable to login to the browser based configuration interface, see IV-7-4-4. Factory Default for how to reset the access point.

Account to Manage This Device

Administrator Name

admin

Administrator Password

.....

(4-32 Characters)

.....

(Confirm)

Apply

Advanced Settings

Product Name

AP74DA3803EC1A

Management Protocol

☒ HTTP

☒ HTTPS

☒ TELNET

☐ SSH

☐ SNMP

SNMP Version

v1/v2c

SNMP Get Community

public

SNMP Set Community

private

SNMP Trap

Disabled

SNMP Trap Community

public

SNMP Trap Manager

Apply

Account to Manage This Device	
Administrator Name	Set the access point’s administrator name. This is used to log in to the browser based configuration interface and must be between 4-16 alphanumeric characters (case sensitive).
Administrator Password	Set the access point’s administrator password. This is used to log in to the browser based configuration interface and must be between 4-32 alphanumeric characters (case sensitive).

Advanced Settings

Product Name	Edit the product name according to your preference consisting of 1-32 alphanumeric characters. This name is used for reference purposes.
Management Protocol	Check/uncheck the boxes to enable/disable specified management interfaces (see below). When SNMP is enabled, complete the SNMP fields below.
SNMP Version	Select SNMP version appropriate for your SNMP manager.
SNMP Get Community	Enter an SNMP Get Community name for verification with the SNMP manager for SNMP-GET requests.
SNMP Set Community	Enter an SNMP Set Community name for verification with the SNMP manager for SNMP-SET requests.
SNMP Trap	Enable or disable SNMP Trap to notify SNMP manager of network errors.
SNMP Trap Community	Enter an SNMP Trap Community name for verification with the SNMP manager for SNMP-TRAP requests.
SNMP Trap Manager	Specify the IP address or sever name (2-128 alphanumeric characters) of the SNMP manager.

HTTP

Internet browser HTTP protocol management interface

HTTPS

Internet browser HTTPS protocol management interface

TELNET

Client terminal with telnet protocol management interface

SSH

Client terminal with SSH protocol version 1 or 2 management interface

SNMP

Simple Network Management Protocol. SNMPv1, v2 & v3 protocol supported. SNMPv2 can be used with community based authentication. SNMPv3 uses user-based security model (USM) architecture.

IV-7-3-2. Date and Time

You can configure the time zone settings of your access point here. The date and time of the device can be configured manually or can be synchronized with a time server.

Date and Time Settings

Local Time

2012 ▼ Year Jan ▼ Month 1 ▼ Day

0 ▼ Hours 00 ▼ Minutes 00 ▼ Seconds

Acquire Current Time from Your PC

NTP Time Server

Use NTP ☒ Enable

Server Name

Update Interval 24 (Hours)

Time Zone

Time Zone (GMT-06:00) Central Time (US & Canada) ▼

Date and Time Settings	
Local Time	Set the access point's date and time manually using the drop down menus.
Acquire Current Time from your PC	Click "Acquire Current Time from Your PC" to enter the required values automatically according to your computer's current time and date.

NTP Time Server	
Use NTP	The access point also supports NTP (Network Time Protocol) for automatic time and date setup.
Server Name	Enter the host name or IP address of the time server if you wish.
Update Interval	Specify a frequency (in hours) for the access point to update/synchronize with the NTP server.

Time Zone	
Time Zone	Select the time zone of your country/ region. If your country/region is not listed, please select another country/region whose time zone is the same as yours.

IV-7-3-3. Syslog Server

The system log can be sent to a server, attached to USB storage or sent via email.

Syslog Server Settings	
Transfer Logs	☐ Enable Syslog Server
Copy Logs to Attached USB Device	☐ Enable

Syslog E-mail Settings	
E-mail Logs	☒
E-mail Subject	
SMTP Server Address	
SMTP Server Port	
Sender E-mail	
Receiver E-mail	
Authentication	SSL ▼ Disable SSL TLS
Account	
Password	

Syslog Server Settings	
Transfer Logs	Check/uncheck the box to enable/disable the use of a syslog server, and enter a host name, domain or IP address for the server, consisting of up to 128 alphanumeric characters.
Copy Logs to Attached USB Device	Check/uncheck the box to enable/disable copying logs to attached USB storage.

Syslog Email Settings	
Email Logs	Check/uncheck the box to enable/disable email logs. When enabled, the log will be emailed according to the settings below.
Email Subject	Enter the subject line of the email which will be sent containing the log.
SMTP Server Address	Specify the SMTP server address for the sender email account.
SMTP Server Port	Specify the SMTP server port for the sender email account.
Sender Email	Enter the sender's email address.
Receiver Email	Specify the email recipient of the log.
Authentication	Select "Disable", "SSL" or "TLS" according to your email authentication.

Account	When authentication is used above, enter the account name.
Password	When authentication is used above, enter the password.

IV-7-3-4. I'm Here

The access point features a built-in buzzer which can sound on command using the "I'm Here" page. This is useful for network administrators and engineers working in complex network environments to locate the access point.

Duration of Sound	
Duration of Sound	10 (1-300 seconds)

The buzzer is loud!



Duration of Sound	Set the duration for which the buzzer will sound when the "Sound Buzzer" button is clicked.
Sound Buzzer	Activate the buzzer sound for the above specified duration of time.

IV-7-4. Advanced

Wi-Fi Multimedia (WMM) is a Wi-Fi Alliance interoperability certification based on the IEEE 802.11e standard, which provides Quality of Service (QoS) features to IEEE 802.11 networks. WMM prioritizes traffic according to four categories: background, best effort, video and voice.

IV-7-4-1. LED Settings

The access point's LEDs can be manually enabled or disabled according to your preference.

LED Settings	
Power LED	☒ On ☐ Off
Diag LED	☒ On ☐ Off

Power LED	Select on or off.
Diag LED	Select on or off.

IV-7-4-2. Update Firmware

The “Firmware” page allows you to update the system firmware to a more recent version. Updated firmware versions often offer increased performance and security, as well as bug fixes.



This firmware update is for an individual access point. To update firmware for multiple access points in the AP array, go to NMS Settings → Firmware Upgrade.

Firmware Location	
Update firmware from	☒ a file on your PC ☐ a file on an attached USB device (No USB device connected.)

Update firmware from PC	
Firmware Update File	Choose File No file chosen
Update	



Do not switch off or disconnect the access point during a firmware upgrade, as this could damage the device.

Update Firmware From	Select “a file on your PC” to upload firmware from your local computer or from an attached USB device.
Firmware Update File	Click “Browse” to open a new window to locate and select the firmware file in your computer.
Update	Click “Update” to upload the specified firmware file to your access point.

IV-7-4-3. **Save/Restore Settings**

The access point’s “Save/Restore Settings” page enables you to save/backup the access point’s current settings as a file to your local computer or a USB device attached to the access point, and restore the access point to previously saved settings.

Save/Restore Method

Using Device

☒ Using your PC

☐ Using your USB device (No USB device connected.)

Save Settings to PC

Save Settings

☐ Encrypt the configuration file with a password.

Save

Restore Settings from PC

Restore Settings

Choose File No file chosen

☐ Open file with password.

Restore

Save / Restore Settings	
Using Device	Select “Using your PC” to save the access point’s settings to your local computer or to an attached USB device.
Save Settings to PC	
Save Settings	Click “Save” to save settings and a new window will open to specify a location to save the settings file. You can also check the “Encrypt the configuration file with a password” box and enter a password to protect the file in the field underneath, if you wish.
Restore Settings from PC	
Restore Settings	Click the browse button to find a previously saved settings file on your computer, then click “Restore” to replace your current settings. If your settings file is encrypted with a password, check the “Open file with password” box and enter the password in the field underneath.

IV-7-4-4. Factory Default

If the access point malfunctions or is not responding, then it is recommended that you reboot the device (see **IV-7-4-5.**) or reset the device back to its factory default settings. You can reset the access point back to its default settings using this feature if the location of the access point is not convenient to access the reset button.

This will restore all settings to factory defaults.

Factory Default

Factory Default	
	Click "Factory Default" to restore settings to the factory default. A pop-up window will appear and ask you to confirm.



After resetting to factory defaults, please wait for the access point to reset and restart.

IV-7-4-5. Reboot

If the access point malfunctions or is not responding, then it is recommended that you reboot the device or reset the access point back to its factory default settings (see **IV-7-4-4**). You can reboot the access point remotely using this feature.

This will reboot the product. Your settings will not be changed. Click "Reboot" to reboot the product now.

Reboot

Reboot	
	Click "Reboot" to reboot the device. A countdown will indicate the progress of the reboot.

IV-8. Toolbox

IV-8-1. Network Connectivity

IV-8-1-1. Ping

Ping is a computer network administration utility used to test whether a particular host is reachable across an IP network and to measure the round-trip time for sent messages.

Ping Test

Destination Address

Execute

Result

Destination Address	Enter the address of the host.
Execute	Click execute to ping the host.

IV-8-1-2. Trace Route

Traceroute is a diagnostic tool for displaying the route (path) and measuring transit delays of packets across an IP network.

Traceroute Test

Destination Address

Execute

Result

Destination Address	Enter the address of the host.
Execute	Click execute to execute the traceroute command.

V. Best Practice

How to Create and Link WLAN & Access Point Groups

You can use NMS to create individual SSIDs and group multiple SSIDs together into WLAN groups. You can then assign individual access points to use those WLAN group settings and/or group multiple access points together into access point groups, which you can also assign to use WLAN group settings.

Follow the example below to:

- A. Create a WLAN group.
- B. Create an access point group.
- C. Assign the access point group to use the SSID group settings.

A.

1. Go to **NMS Settings** → **WLAN** and click **“Add”** in the **WLAN** panel:
2. Enter an SSID **name** and set **authentication/encryption** and click **“Apply”**:

The screenshot displays the 'WLAN Settings' configuration page in the COMTREND NMS interface. The left sidebar shows a navigation menu with 'WLAN' selected. The main content area contains two sections: 'WLAN Settings' and 'WLAN Advanced Settings'. The 'WLAN Settings' section includes fields for Name/SSID (Sample SSID Name), Description (This is a test SSID), VLAN ID (1), Broadcast SSID (Enable), Wireless Client Isolation (Disable), Load Balancing (50/50), Authentication Method (WPA-PSK), WPA Type (WPA/WPA2 Mixed Mode-PSK), Encryption Type (TKIP/AES Mixed Mode), Key Renewal Interval (60 minutes), Pre-shared Key Type (Passphrase), Pre-shared Key (1234567890), and Additional Authentication (No additional authentication). The 'WLAN Advanced Settings' section includes Smart Handover Settings and Smart Handover options (Enable/Disable).

3. The new SSID will be displayed in the **WLAN** panel. **Repeat** to add additional SSIDs according to your preference, and then click **“Add”** in the **WLAN Group** panel:
4. Enter a **name** for the **SSIDgroup** and **check the boxes** to select which SSIDs to include within the group. Click **“Apply”** when done.

5. The new **WLAN group** will be displayed in the **WLAN Group** panel.
Repeat to add additional WLAN groups according to your preference:

B.

1. Go to **NMS Settings** → **Access Point** and click “Add” in the Access Point Group Panel:
2. Enter a **Name** and then scroll down to the **Group Settings** panel and use the << button to **add** selected access points into your group from the box on the right side. Click “**Apply**” when done.

3. The new **access point group** will be displayed in the **Access Point Group** panel. **Repeat** to add additional access point groups according to your preference:

C.

1. Go to **NMS Settings → Access Point** and select an access point group using the checkboxes in the **Access Point Group** panel. Click **“Edit”**:
2. Scroll down to the **Profile Group Settings** panel and check the **“Override Group Settings”** box for **WLAN Group (2.4GHz and/or 5GHz)**. Select your **WLAN group** from the drop-down menu and click **“Apply”**:
3. Repeat for other access point groups according to your preference.

COPYRIGHT

Copyright ©2015 by this company. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of this company

This company makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability or fitness for any particular purpose. Any software described in this manual is sold or licensed "as is". Should the programs prove defective following their purchase, the buyer (and not this company, its distributor, or its dealer) assumes the entire cost of all necessary servicing, repair, and any incidental or consequential damages resulting from any defect in the software. Further, this company reserves the right to revise this publication and to make changes from time to time in the contents thereof without obligation to notify any person of such revision or changes.